C367

14014

P91
Central Junction
Box (CJB)

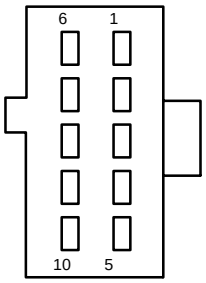

F10002.01

Pin	Circuit	Circuit Function
1	15-KA1 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected)
2	29S-LF21 (OG/BK)	Voltage supplied at all times (overload protected), switched
3	31S-LB3 (BK/BU)	Ground, switched
4	49-LG19 (BU/RD)	Pulsed power feed (overload protected)
5	–	not used
6	29-DA12 (OG/WH)	Voltage supplied at all times (overload protected)
7	49-LG12 (BU)	Pulsed power feed (overload protected)
8	15-DA1 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected)
9	–	not used
10	–	not used

C368

14014

P91
Central Junction
Box (CJB)



F01011

Pin	Circuit	Circuit Function
1	15S-HB19 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected), switched

C369

14K733

P91
Central Junction
Box (CJB)

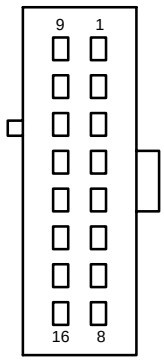

F16001.01

Pin	Circuit	Circuit Function
1	15-LG23 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected)
2	15-DA2 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected)
3	15-RH9 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected)
4	32-KA9 (WH/BU)	Switched between: Battery voltage, Ground or Open
5	–	not used
6	29S-LF7 (OG/BU)	Voltage supplied at all times (overload protected), switched
7	33-KA34 (YE/BK)	Switched between: Battery voltage, Ground or Open
8	15-KA9 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected)
9	–	not used
10	29S-LF20 (OG)	Voltage supplied at all times (overload protected), switched
11	29S-LF16 (OG/GN)	Voltage supplied at all times (overload protected), switched
12	–	not used
13	29S-LF11 (OG/WH)	Voltage supplied at all times (overload protected), switched
14	49-LG11 (BU/OG) + 49-LG13 (BU/RD)	Pulsed power feed (overload protected)
15	15-CF6 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected)
16	49-LG18 (BU) + 49-LG20 (BU/WH)	Pulsed power feed (overload protected)