## C4104a

### 14405

A7
ABS control module
(2C219)

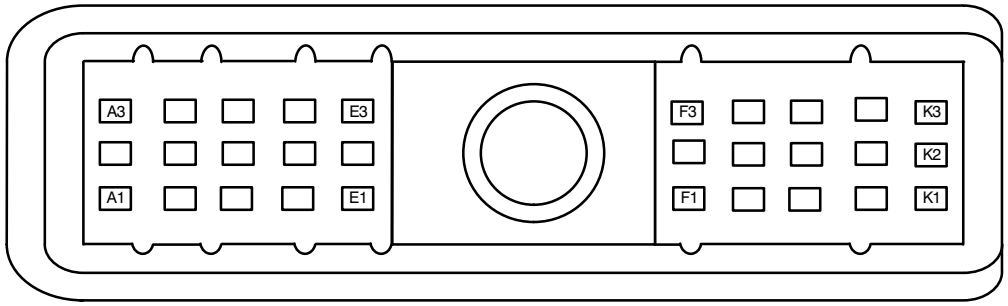


F30005

| Pin | Circuit | Circuit function |
|---|---|---|
| A1 | 57 (BK) | Ground |
| B1 | – | not used |
| C1 | 601 (LB/PK) | Wheel speed sensor, right front (2C204) – |
| D1 | 608 (BK/YE) | Height sensor, left front |
| E1 | 600 (DB) | Wheel speed sensor, right front (2C204) + |
| F1 | 602 (RD/LG) | Wheel speed sensor, left front (2C205) + |
| G1 | 618 (VT/LG) | Height sensor, right front |
| H1 | 617 (PK/OG) | Wheel speed sensor, left front (2C205) – |
| J1 | 321 (GY/WH) | Overdrive Drum Speed (ODS) sensor, signal, input |
| K1 | 3231 (OG/LB) | Traction assist switch, feed, to ABS control module |
| A2 | 57 (BK) | Ground |
| B2 | – | not used |
| C2 | – | not used |
| D2 | – | not used |
| E2 | – | not used |

| Pin | Circuit | Circuit function |
|---|---|---|
| F2 | – | not used |
| G2 | 712 (OG) | C–Data |
| H2 | 514 (YE/RD) | Wheel speed sensor, right front (2C204) + |
| J2 | 522 (TN/BK) | Wheel speed sensor, left front (2C205) – |
| K2 | 534 (YE/LG) | Voltage supplied at all times (overload protected) |
| A3 | 57 (BK) | Ground |
| B3 | – | not used |
| C3 | – | not used |
| D3 | – | not used |
| E3 | 603 (DG) | Anti–lock brake indicator, control |
| F3 | – | not used |
| G3 | 716 (YE) | R–Data |
| H3 | 516 (YE/BK) | Wheel speed sensor, right front (2C204) – |
| J3 | – | not used |
| K3 | 534 (YE/LG) | Voltage supplied at all times (overload protected) |