C907 (WH)

13B711

E18
Interior lamp, front



F03056

Pin	Circuit	Circuit Function
1	LI01 (BN)	Voltage supplied at all times (overload protected)
2	LI81 (BN/WH)	Illuminated entry, Ground
3	LI71 (OG)	Ground

C908 (WH)

13B711

E19
Interior lamp, rear



F03056

Pin	Circuit	Circuit Function
1	LI05 (BN)	Voltage supplied at all times (overload protected)
2	LI80 (BN/WH)	Illuminated entry, Ground
3	LI70 (OG)	Ground

C910 (WH)

13B711

N411
Roof opening panel switch

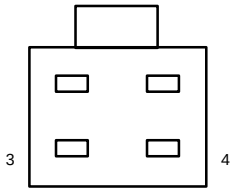

F04231

Pin	Circuit	Circuit Function
1	PF02 (BK/RD)	Down - Open
2	PFE1 (BK)	Ground
3	PF03 (WH/BU)	closed - Up
4	PF01 (OG/BK)	Power window relay, switched output

C914

13B711

M201
Roof opening panel motor assembly

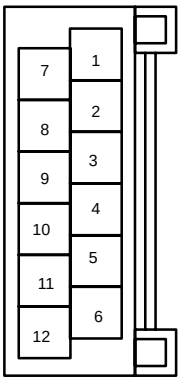

F12097

Pin	Circuit	Circuit Function
1	PF03 (WH/BU)	closed - Up
2	PF02 (BK/RD)	Down - Open
3	–	not used
4	–	not used
5	PF04 (BN)	Voltage supplied at all times (overload protected)
6	PFE2 (BK)	Ground
7	–	not used
8	–	not used
9	–	not used
10	–	not used
11	–	not used
12	–	not used