C497

14405, 14A584

E35
License plate lamp, right

F01005

Pin	Circuit	Circuit Function
1	29S-LF22 (OG/BK)	Voltage supplied at all times (overload protected), switched

C521

F16001.01

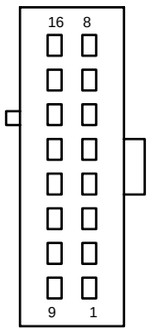

A11
Radio

Pin	Circuit	Circuit Function
1	8-MD10 (WH/BK)	Sensor signal
2	8-MD11 (WH/VT)	Sensor signal
3	8-MD18 (WH)	Sensor signal
4	8-MD17 (WH/RD)	Sensor signal
5	31S-MD19 (BK/BU)	Ground, switched
6	–	not used
7	75-MD15 (YE/GN)	Voltage: Ignition switch in Accessory or Run
8	91-MD15 (BK/GN)	Ground
9	10-MD10 (GY/BK)	Signal 2 (Y–direction, reverse, downward)
10	10-MD11 (GY/WH)	Signal 2 (Y–direction, reverse, downward)
11	10-MD18 (GY)	Signal 2 (Y–direction, reverse, downward)
12	10-MD17 (GY/RD)	Signal 2 (Y–direction, reverse, downward)
13	–	not used
14	29S-LK34 (OG/BK)	Voltage supplied at all times (overload protected), switched
15	–	not used
16	29-MD15 (OG/BK)	Voltage supplied at all times (overload protected)