C504a

14A005

Master window adjust switch (14529)

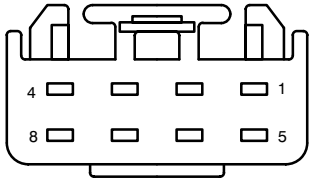

F08074

Pin	Circuit	Circuit function
1	316 (YE/LB)	Window switch, feed, left rear, Up
2	317 (GY/OG)	Window switch, feed, left rear, Down
3	319 (YE/BK)	Window switch, feed, right rear, Down
4	320 (RD/BK)	Window switch, feed, right rear, Up
5	226 (WH/BK)	Window switch, feed, left front, Down
6	227 (YE)	Window switch, feed, left front, Up
7	313 (WH/YE)	Window switch, feed, right front, Down
8	314 (TN/LB)	Window switch, feed, right front, Up

C504b

14A005

Master window adjust switch (14529)

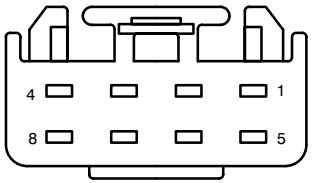

F08074

Pin	Circuit	Circuit function
1	–	not used
2	–	not used
3	–	not used
4	–	not used
5	57 (BK)	Ground
6	–	not used
7	170 (RD/LB)	Window lockout, switched power, output
8	193 (YE/LG)	Accessory relay, output