C1305

12A581

B22
Mass Air Flow (MAF) sensor (12B579)

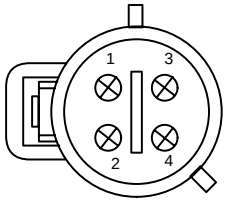

F04263

Pin	Circuit	Circuit function
1	361 (RD)	Voltage supplied in Start and Run (overload protected)
2	967 (LB/RD)	Mass Air Flow (MAF) sensor (12B579), output
3	570 (BK/WH)	Ground
4	968 (TN/LB)	Mass Air Flow (MAF) sensor (12B579), signal, return

C1309

12A581

K228
Crash fuel shutoff relay

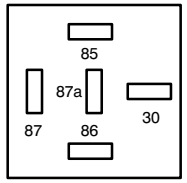

F05051

Pin	Circuit	Circuit function
30	866 (WH)	Fuel pump relay, switched output
85	361 (RD)	Voltage supplied in Start and Run (overload protected)
86	238 (DG/YE)	Switched ground
87	786 (RD)	Crash fuel shutoff relay, output
87a	–	not used

C2003

14401

M236
Adjustable pedal motor (2C429)

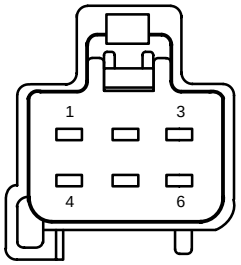

F06249

Pin	Circuit	Circuit function
1	–	not used
2	–	not used
3	–	not used
4	–	not used
5	1495 (WH)	Adjustable pedal switch, Rearward
6	1494 (RD)	Adjustable pedal switch, Forward

C2008

14401

Y215
Brake shift interlock

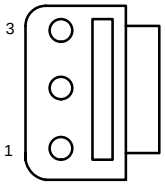

F03080

Pin	Circuit	Circuit function
1	1003 (GY/YE)	Voltage in Run (overload protected)
2	57 (BK)	Ground
3	810 (RD/LG)	Brake pedal position switch (13480), input