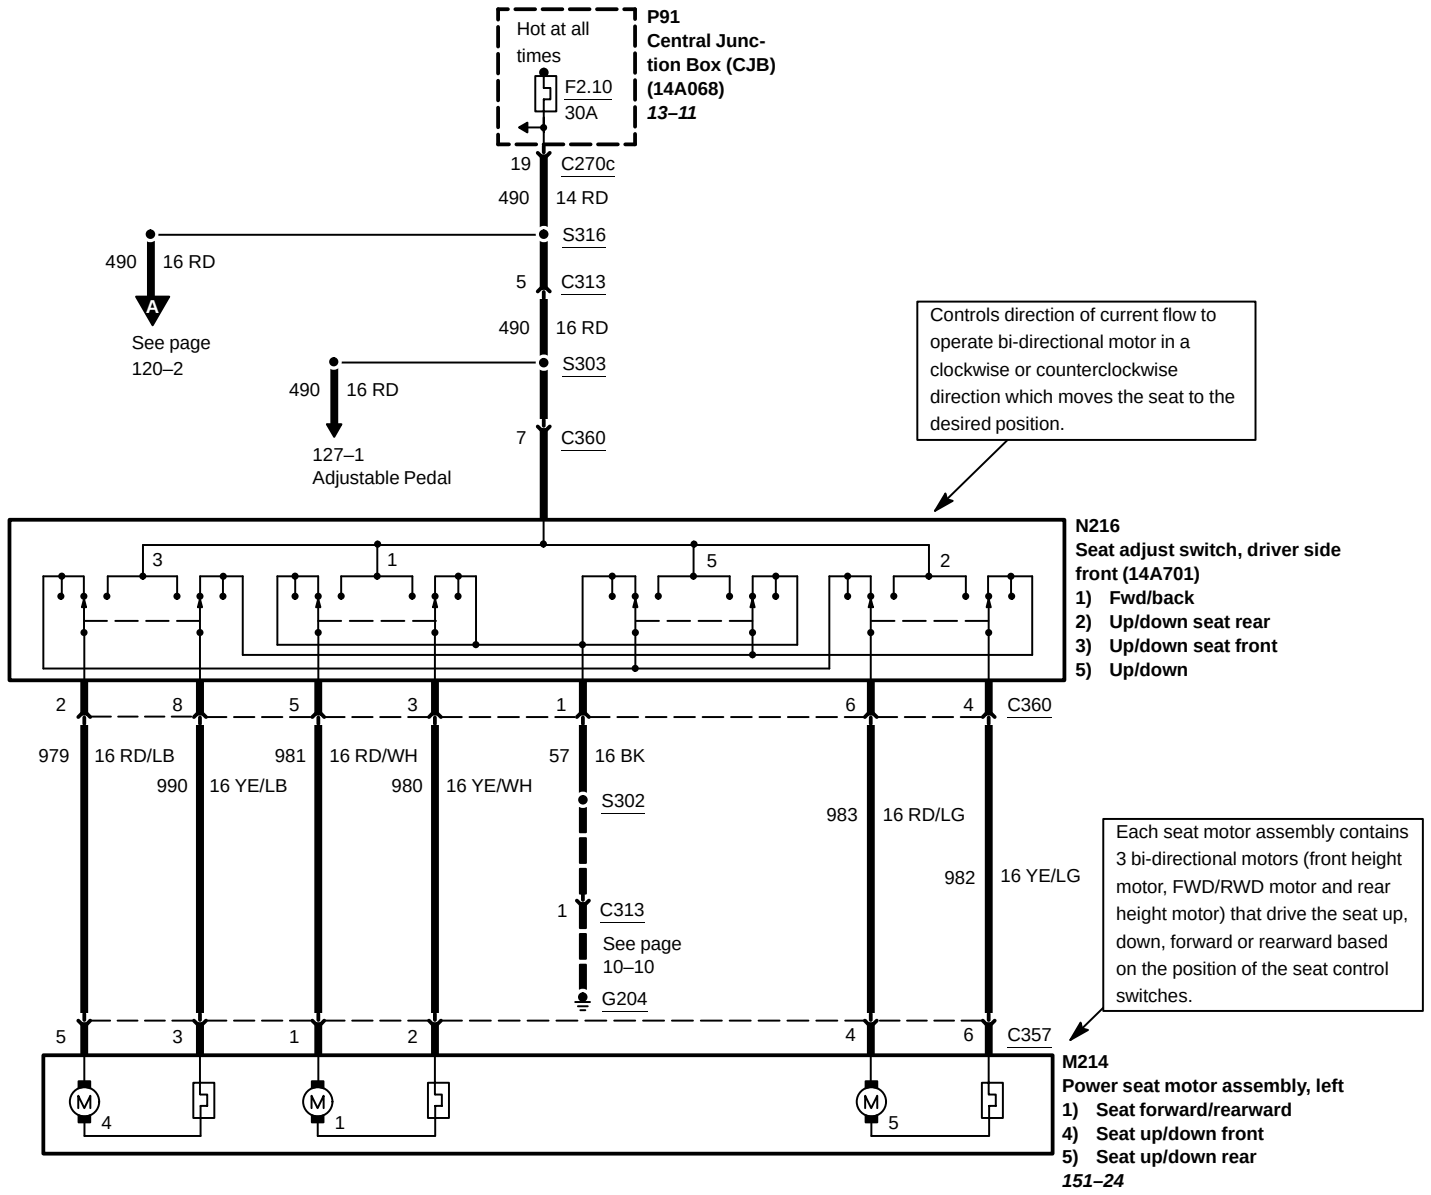
Hot at all times
F2.10
30A
P91
Central Junction Box (CJB)
(14A068)
13–11
19
C270c
490
14 RD
S316
490
16 RD
5
C313
490
16 RD
S303
See page 120–2
490
16 RD
7
C360
127–1
Adjustable Pedal
Controls direction of current flow to operate bi-directional motor in a clockwise or counterclockwise direction which moves the seat to the desired position.
N216
Seat adjust switch, driver side front (14A701)
1) Fwd/back
2) Up/down seat rear
3) Up/down seat front
5) Up/down
3
1
5
2
2
8
5
3
1
6
4
C360
979
16 RD/LB
990
16 YE/LB
981
16 RD/WH
980
16 YE/WH
57
16 BK
S302
983
16 RD/LG
982
16 YE/LG
1
C313
See page 10–10
G204
Each seat motor assembly contains 3 bi-directional motors (front height motor, FWD/RWD motor and rear height motor) that drive the seat up, down, forward or rearward based on the position of the seat control switches.
5
3
1
2
4
6
C357
M
4
1
5
M214
Power seat motor assembly, left
1) Seat forward/rearward
4) Seat up/down front
5) Seat up/down rear
151–24