10-5 GROUNDS

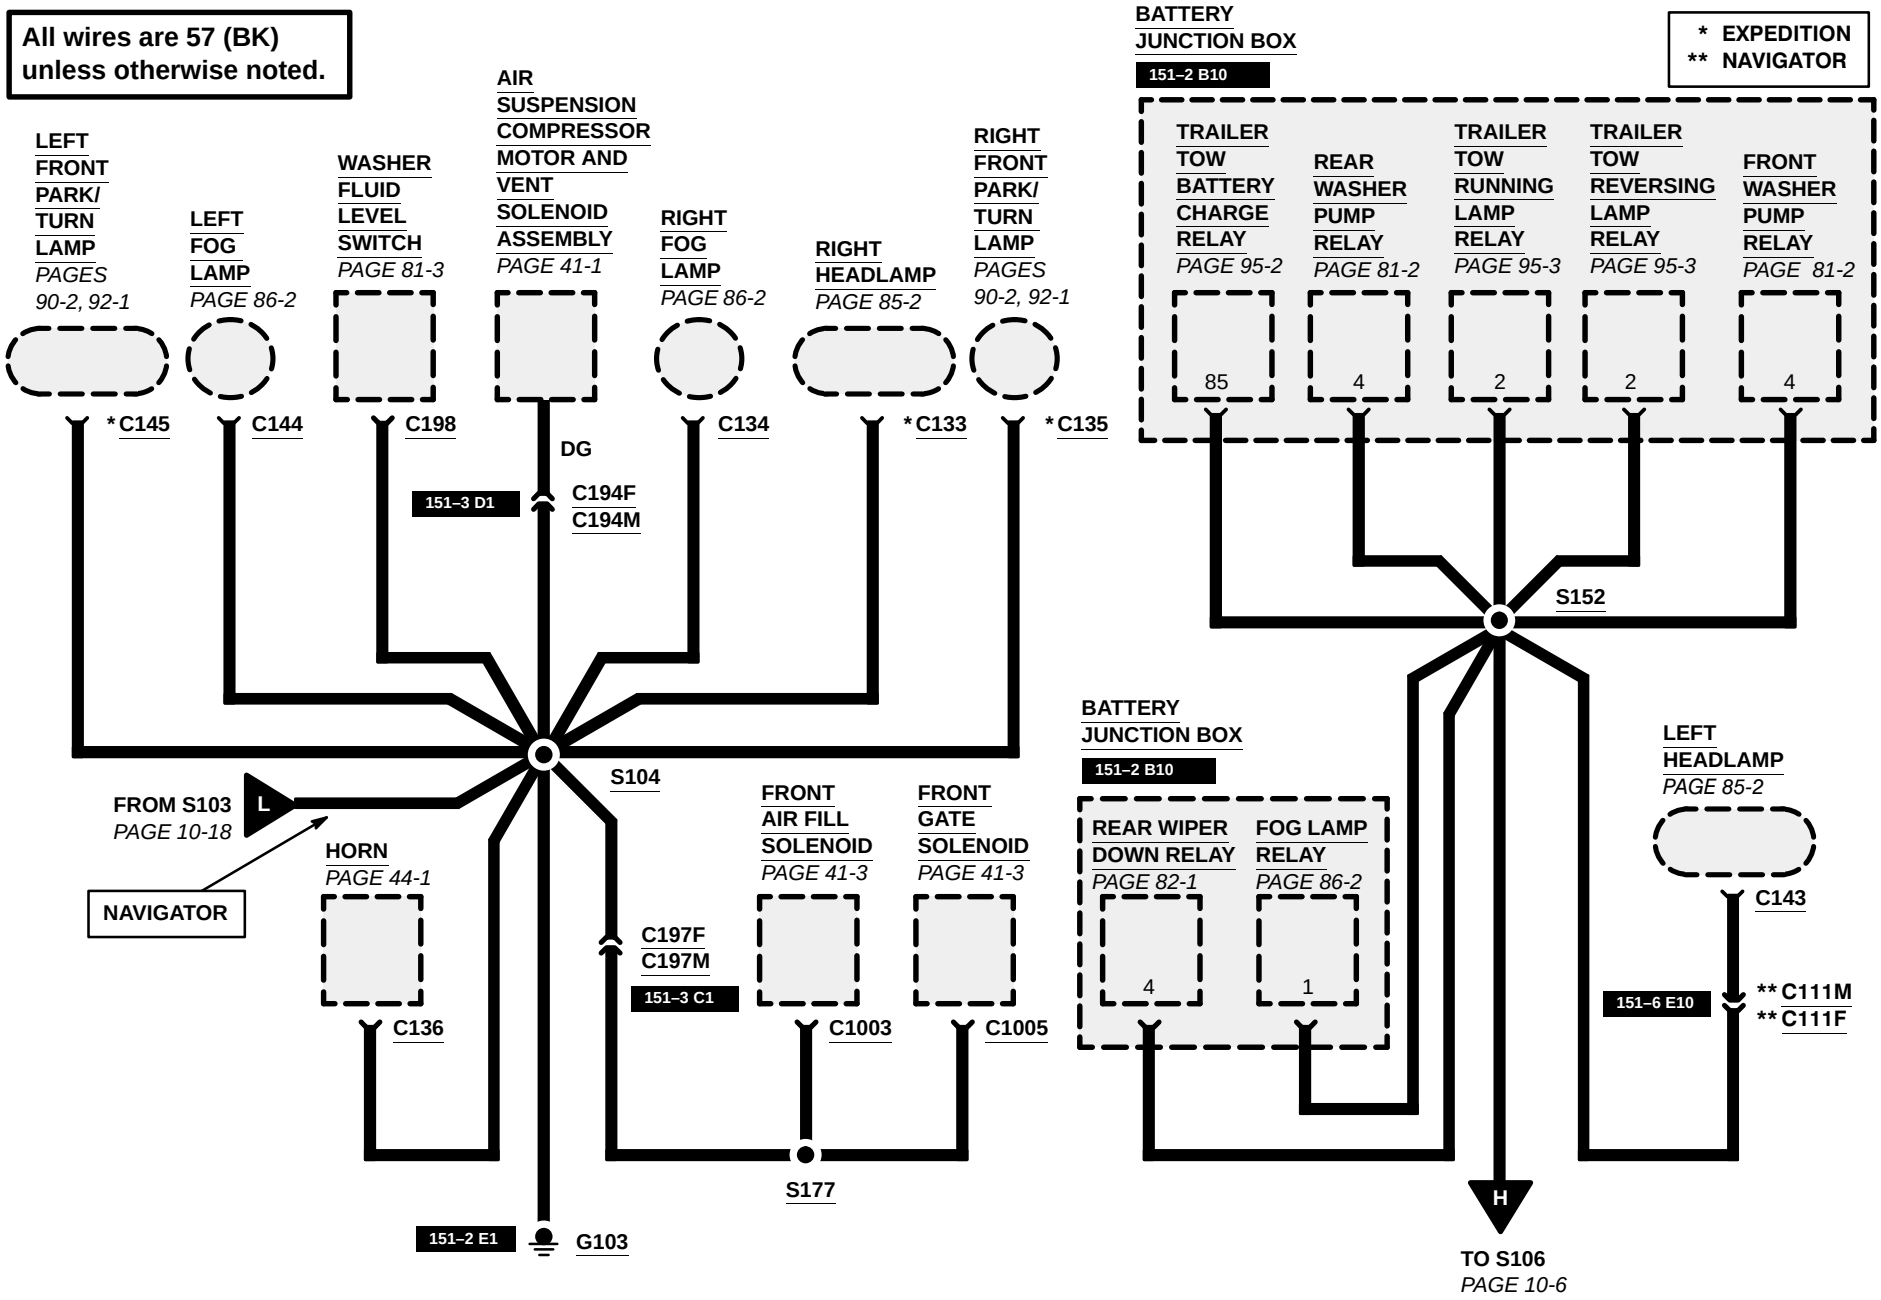
All wires are 57 (BK) unless otherwise noted.
* EXPEDITION
** NAVIGATOR
LEFT FRONT PARK/ TURN LAMP
PAGES 90-2, 92-1
LEFT FOG LAMP
PAGE 86-2
WASHER FLUID LEVEL SWITCH
PAGE 81-3
AIR SUSPENSION COMPRESSOR MOTOR AND VENT SOLENOID ASSEMBLY
PAGE 41-1
RIGHT FOG LAMP
PAGE 86-2
RIGHT HEADLAMP
PAGE 85-2
RIGHT FRONT PARK/ TURN LAMP
PAGES 90-2, 92-1
BATTERY JUNCTION BOX
151–2 B10
TRAILER TOW BATTERY CHARGE RELAY
PAGE 95-2
REAR WASHER PUMP RELAY
PAGE 81-2
TRAILER TOW RUNNING LAMP RELAY
PAGE 95-3
TRAILER TOW REVERSING LAMP RELAY
PAGE 95-3
FRONT WASHER PUMP RELAY
PAGE 81-2
85
4
2
2
4
*C145
C144
C198
DG
151–3 D1
C194F
C194M
C134
*C133
*C135
S152
S104
FROM S103
PAGE 10-18
L
NAVIGATOR
HORN
PAGE 44-1
C136
C197F
C197M
151–3 C1
FRONT AIR FILL SOLENOID
PAGE 41-3
FRONT GATE SOLENOID
PAGE 41-3
C1003
C1005
S177
151–2 E1
G103
BATTERY JUNCTION BOX
151–2 B10
REAR WIPER DOWN RELAY
PAGE 82-1
FOG LAMP RELAY
PAGE 86-2
4
1
LEFT HEADLAMP
PAGE 85-2
C143
151–6 E10
**C111M
**C111F
H
TO S106
PAGE 10-6