Master window adjust switch (14529)

Schematic

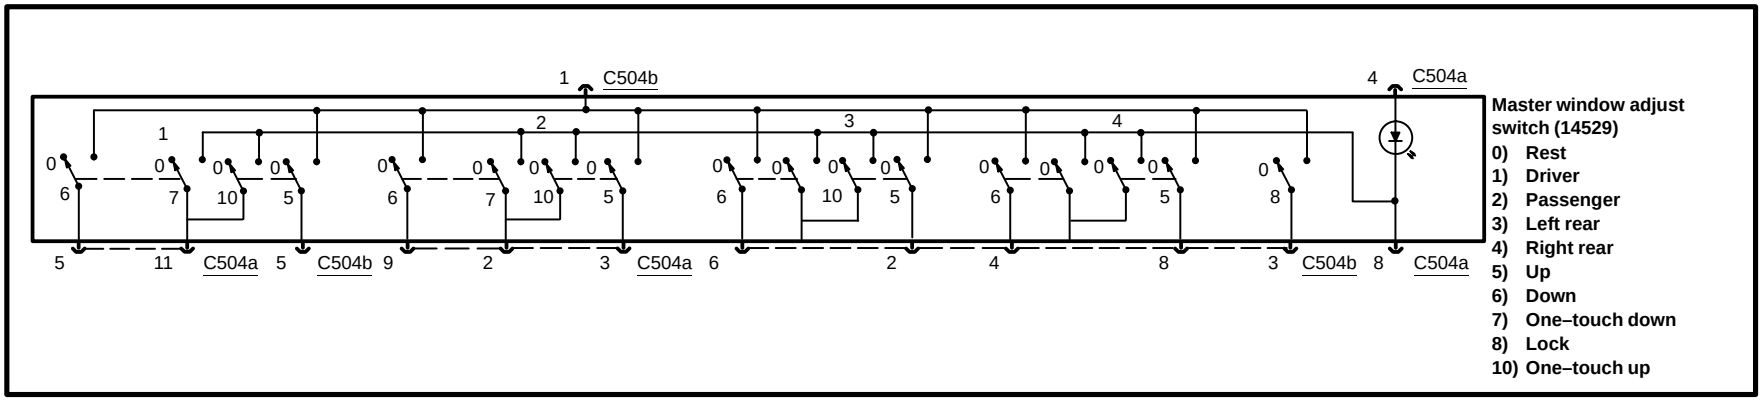

Component testing procedure

Circuit to test	Connect self–powered test light or ohm-meter to terminals	Move switch to these positions	A good switch will indicate
Switch lock	1 (C504b) and 3 (C504b)	Lock On	Closed circuit
		Lock Off	Open circuit
One–Touch Down Switch, left front	1 (C504b) and 5 (C504a)	Down	Closed circuit
	11 (C504a) and 8 (C504a)	Rest	Open circuit
one–touch up switch, left front	1 (C504b) and 5 (C504b)	Up	Closed circuit
	11 (C504a) and 8 (C504a)	Rest	Open circuit
One–Touch Down Switch, right front	1 (C504b) and 9 (C504a)	Down	Closed circuit
	2 (C504a) and 8 (C504a)	Rest	Open circuit
one–touch up switch, left front	1 (C504b) and 3 (C504a)	Down	Closed circuit
	2 (C504a) and 8 (C504a)	Rest	Open circuit
Left front window circuit	1 (C504b) and 5 (C504b)	Up	Closed circuit
	1 (C504b) and 5 (C504a)	Down	Closed circuit
Right front window circuit	1 (C504b) and 3 (C504a)	Up	Closed circuit
	1 (C504b) and 9 (C504a)	Down	Closed circuit
Left rear window circuit	1 (C504b) and 2 (C504b)	Up	Closed circuit
	1 (C504b) and 6 (C504b)	Down	Closed circuit
Right rear window circuit	1 (C504b) and 8 (C504b)	Up	Closed circuit
	1 (C504b) and 4 (C504b)	Down	Closed circuit

Terminals

C504a

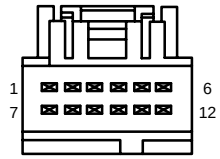

F12185

C504b

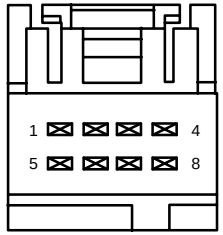

F08299