C396

14A005

Y19
Speaker, right rear
(18808)



F02048

Pin	Circuit	Circuit function
1	803 (BN/PK)	Speaker, right rear (18808) –
2	802 (OG/RD)	Speaker, right rear (18808) +

C402a

18C619
14A005

R19
Rear window defrost
grid (18C618)

F01029

Pin	Circuit	Circuit function
1	687 (BK)	Rear window defrost relay, switched power
	186 (BN/LB)	Rear window defrost relay, switched power

C402b

18C620

R19
Rear window defrost
grid (18C618)

F01029

Pin	Circuit	Circuit function
1	57 (BK)	Ground

C405

19B516

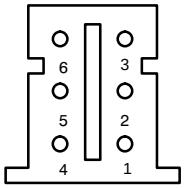

F06257

14A005

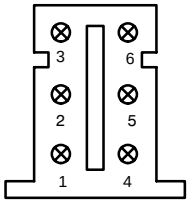

F06138

(1) 705 (LG/OG)
(2) 1205 (BK)
(3) 569 (DG)
(4) 84 (VT/YE)
(5) 14 (BN)
(6) 486 (BN/WH)

C406

13410



F04271

14A005



F04271

(1) 9 (LG/OG)
(2) 14 (BN)
(3) 140 (BK/PK)
(4) 1205 (BK)

C408

13407

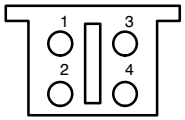

F04271

14A005

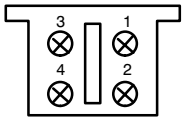

F04271

(1) 5 (OG/LB)
(2) 14 (BN)
(3) 140 (BK/PK)
(4) 1205 (BK)