C604

14A205

Window adjust switch, passenger side

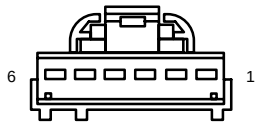

F06315

Pin	Circuit	Circuit function
1	7S-AJ47B (YE/BK)	Up, switch sense
2	64S-LH31 (BU/RD)	Illumination, feed
3	31-LH31 (BK)	Illumination, Ground
4	8-AJ56B (WH/GN)	one–touch up, EGR Vacuum Regulator (EVR), switch sense
5	7-AJ18 (YE/VT)	Reference voltage
6	7S-AJ48B (YE/VT)	Down, switch sense

C605

14A205

Door lock switch, passenger side (14028)

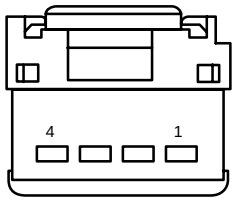

F04321

Pin	Circuit	Circuit function
1	8-AA20 (WH/BU)	Lock, switch sense
2	64S-LH42 (BU/RD)	Illumination, feed
3	8-AA21 (WH/GN)	Unlock, switch sense
4	31-LH42 (BK)	Ground