C523

14A005

Y28
Speaker, left front
(18808)

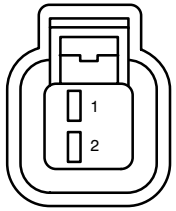

F02069

Pin	Circuit	Circuit function
1	804 (OG/LG)	Speaker, left front (18808) +
2	813 (LB/WH)	Speaker, left front (18808) –

C524

14A005

M80
Power window motor, driver side front
(23395)



F02073

Pin	Circuit	Circuit function
1	992 (WH/BK)	Master window adjust switch (14529), feed, Up
2	996 (OG/WH)	Window motor, feed, Down

C525

14A005

M225
Door lock actuator, driver side (218A42)

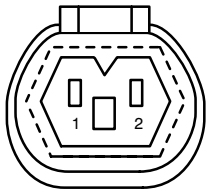

F02227

Pin	Circuit	Circuit function
1	163 (RD/OG)	Driver door unlock relay, switched power
2	117 (PK/BK)	Door lock, output

C526

14A005

N240
Door ajar switch, passenger side front
(14018)

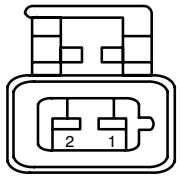

F02379

Pin	Circuit	Circuit function
1	344 (BK/YE)	Door ajar switch, right front, signal
2	57 (BK)	Ground

C527

before 8/20/01

14A005

N409
Exterior rear view mirror switch
(17B676)

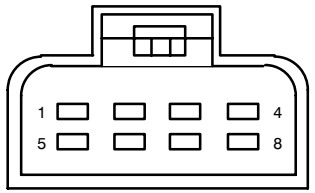

F08177

Pin	Circuit	Circuit function
1	956 (OG/LG)	Voltage supplied at all times (overload protected)
2	–	not used
3	1478 (DG/OG)	Power mirror, left, Right, Right/Left mirror movement
4	1476 (RD/OG)	Power mirror, left, Right/Left mirror movement
5	875 (BK/LB)	Ground
6	1477 (YE/BK)	Exterior rear view mirror switch (17B676), to, Power mirrors
7	1479 (DB/OG)	Left mirror, Voltage in Run (overload protected)
8	1475 (PK/OG)	Power mirror, RH side, Up/Down mirror movement