C3028

14B079

A144
CD changer
(18D806)

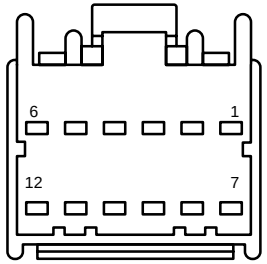

F12103

Pin	Circuit	Circuit function
1	832 (LB/PK)	Audio corporate protocol A
2	–	not used
3	694 (BK/LG)	Ground
4	–	not used
5	856 (VT)	Radio (18806), to CD changer, Left +
6	690 (GY)	Radio (18806), to CD changer, Right +
7	833 (TN)	Audio corporate protocol B
8	1068 (LG/BK)	Audio System ON (ASYSON)
9	829 (WH/VT)	Rear Integrated Control Panel (RICP) (19980), feed
10	48	Shield
11	798 (LG/RD)	Radio (18806), to CD changer, Left –
12	799 (OG/BK)	Radio (18806), to CD changer, Right –

C3029

14B079

N487
Tonneau cover lock-
out switch

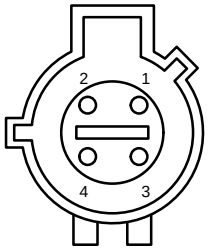

F04075

Pin	Circuit	Circuit function
1	1628 (WH/RD)	Tonneau cover control module (14B450)
2	–	not used
3	1631 (VT)	Tonneau cover open/close switch, LH side (14529), and, Tonneau cover open/close switch, RH side (15B691), Enable
4	–	not used