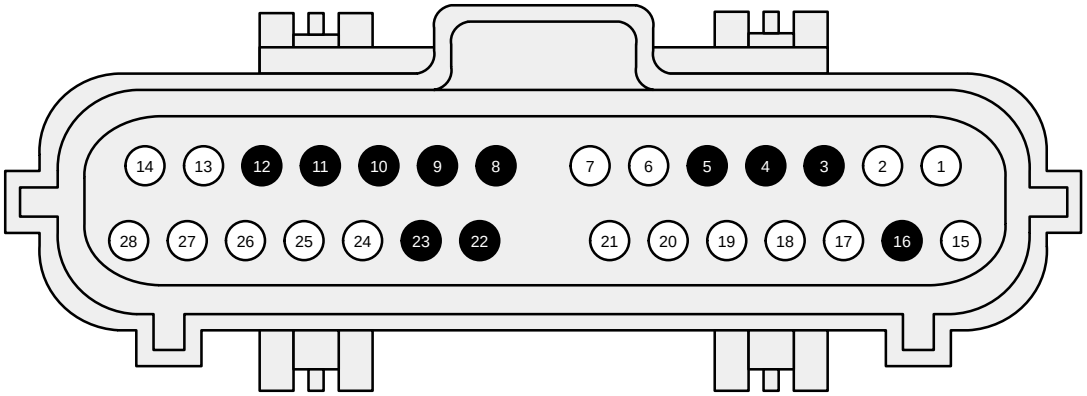


**C200 (GRAY)**
**ELECTRONIC CRASH SENSOR (ECS) MODULE**

| PIN | CIRCUIT | CIRCUIT FUNCTION | PIN | CIRCUIT | CIRCUIT FUNCTION |
|---|---|---|---|---|---|
| 1 | 614 (GY/OG) | Driver Air Bag | 15 | 615 (GY/WH) | Driver Air Bag |
| 2 | 298 (VT/OG) | Power (Hot in Run) | 16 | – | NOT USED |
| 3 | – | NOT USED | 17 | 937 (RD/WH) | Power (Hot at All Times) |
| 4 | – | NOT USED | 18 | 875 (BK/LB) | Ground |
| 5 | – | NOT USED | 19 | 70 (LB/WH) | Data Link Connector (DLC) |
| 6 | 619 (PK/WH) | Center Air Bag Sensor | 20 | 1084 (PK) | Air Bag Bracket |
| 7 | 608 (BK/YE) | Air Bag Indicator | 21 | 875 (BK/LB) | Ground |
| 8 | – | NOT USED | 22 | – | NOT USED |
| 9 | – | NOT USED | 23 | – | NOT USED |
| 10 | – | NOT USED | 24 | 1079 (LG/RD) | Pretensioner Feed (Driver) |
| 11 | – | NOT USED | 25 | 1080 (LG/BK) | Pretensioner Return (Driver) |
| 12 | – | NOT USED | 26 | 1081 (YE/RD) | Pretensioner Return (Passenger) |
| 13 | 159 (RD/PK) | Courtesy Lamp/Warning Buzzer | 27 | 1082 (YE/BK) | Pretensioner Feed (Passenger) |
| 14 | 607 (LB/OG) | Passenger Air Bag | 28 | 616 (PK/BK) | Passenger Air Bag |