C341d

14A699

A207
Driver seat module
(14C718)



F02476

Pin	Circuit	Circuit function
1	1205 (BK)	Ground
2	566 (DG)	Voltage supplied at all times (overload protected)

C342

14A699

N275
Seat heater switch,
passenger side

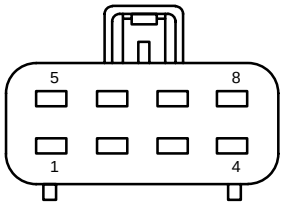

F08209

Pin	Circuit	Circuit function
1	1040 (RD/BK)	Voltage in Run (overload protected)
2	581 (RD)	Seat heater switch, passenger side, to, Heated seat module, passenger side front
3	–	not used
4	461 (OG)	Seat heater switch, passenger side, to, Heated seat module, passenger side front
5	–	not used
6	1040 (RD/BK)	Voltage in Run (overload protected)
7	–	not used
8	–	not used

C344

14A699

N274
Seat heater switch,
driver side

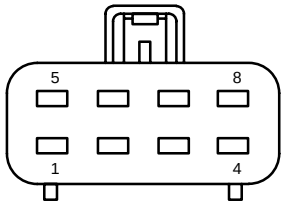

F08209

Pin	Circuit	Circuit function
1	1040 (RD/BK)	Voltage in Run (overload protected)
2	1020 (DG/VT)	Seat heater switch, driver side, to, Heated seat module, driver side front
3	–	not used
4	461 (OG)	Seat heater switch, driver side, to, Heated seat module, driver side front
5	–	not used
6	1040 (RD/BK)	Voltage in Run (overload protected)
7	–	not used
8	–	not used

C356

14A699

B231
Seat track position
sensor, left

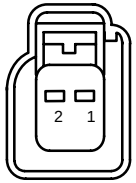

F02132

Pin	Circuit	Circuit function
1	1558 (TN/BK)	Seat track position sensor, driver, return
2	1520 (LG)	Seat position sensor – horizontal sense