C485

14A005/18C620

Y19
Speaker, right rear

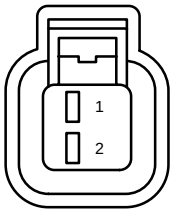

F02069

Pin	Circuit	Circuit Function
1	802 (OG/RD)	Speaker, right rear +
2	803 (BN/PK)	Speaker, right rear -

C487

18C620

E105
Reversing lamp, left



F03033

Pin	Circuit	Circuit Function
1	57 (BK)	Ground
2	–	not used
3	140 (BK/PK)	Voltage supplied in reverse

C488

18C620

E109
Reversing lamp, right



F03033

Pin	Circuit	Circuit Function
1	57 (BK)	Ground
2	–	not used
3	140 (BK/PK)	Voltage supplied in reverse

C489 (NA)

13B783

E87
Cargo space lamp

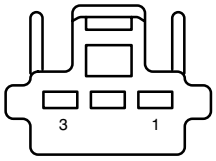

F03173

Pin	Circuit	Circuit Function
1	53 (BK/LB)	Interior lamp relay, switched power, output
2	57 (BK)	Ground
3	705 (LG/OG)	Battery saver relay, switched power