3.0L 2V -4

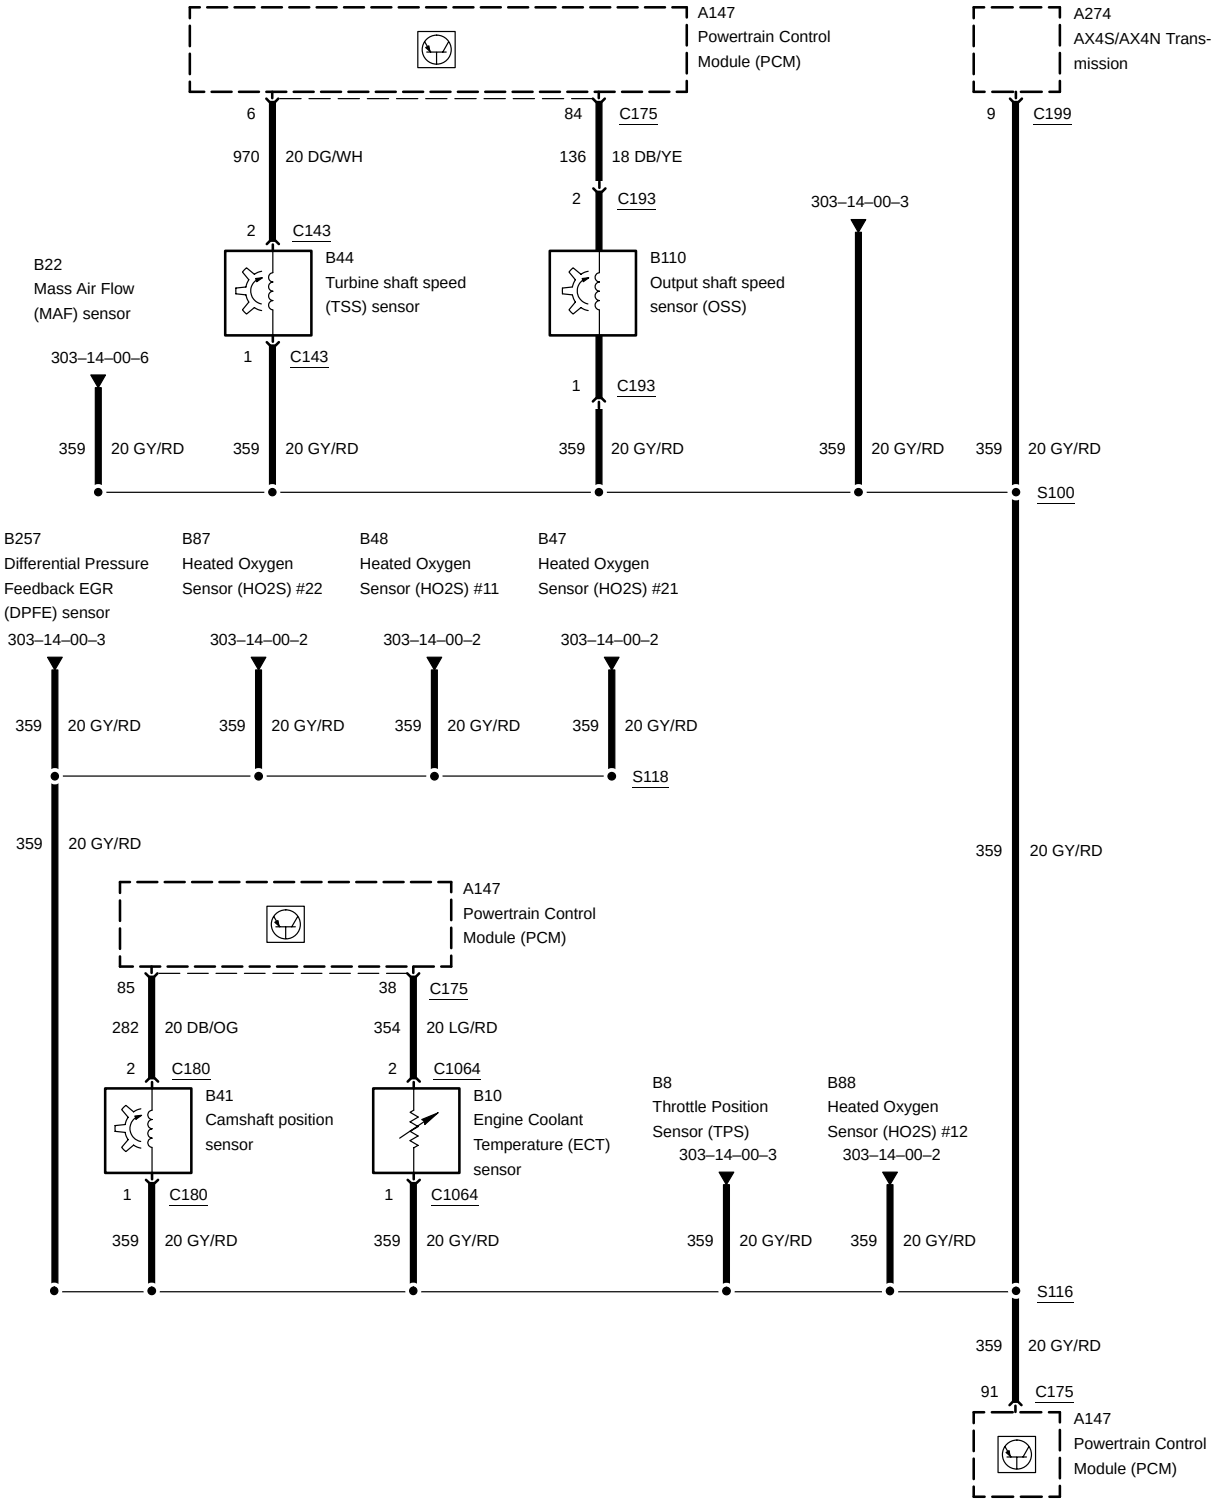
A147
Powertrain Control
Module (PCM)
A274
AX4S/AX4N Trans-
mission
6
970
20 DG/WH
84
C175
136
18 DB/YE
9
C199
2
C143
2
C193
303–14–00–3
B22
Mass Air Flow
(MAF) sensor
B44
Turbine shaft speed
(TSS) sensor
B110
Output shaft speed
sensor (OSS)
303–14–00–6
1
C143
1
C193
359
20 GY/RD
S100
B257
Differential Pressure
Feedback EGR
(DPFE) sensor
B87
Heated Oxygen
Sensor (HO2S) #22
B48
Heated Oxygen
Sensor (HO2S) #11
B47
Heated Oxygen
Sensor (HO2S) #21
303–14–00–2
S118
A147
Powertrain Control
Module (PCM)
85
282
20 DB/OG
38
C175
354
20 LG/RD
2
C180
2
C1064
B41
Camshaft position
sensor
B10
Engine Coolant
Temperature (ECT)
sensor
1
C180
1
C1064
B8
Throttle Position
Sensor (TPS)
303–14–00–3
B88
Heated Oxygen
Sensor (HO2S) #12
303–14–00–2
S116
91
C175
A147
Powertrain Control
Module (PCM)