C380 (BK)

14B079

Power point, console (19N236)

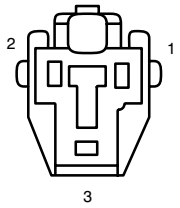

F03163

Pin	Circuit	Circuit function
1	1049 (BN/PK)	Voltage supplied at all times (overload protected)
2	–	not used
3	57 (BK)	Ground

C395 (BK)

14A005

Speaker, left rear (18808)

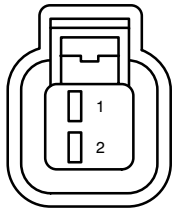

F02069

Pin	Circuit	Circuit function
1	800 (GY/LB)	Speaker, left rear (18808) +
2	801 (TN/YE)	Speaker, left rear (18808) -

C396 (BK)

14A005

Speaker, right rear (18808)

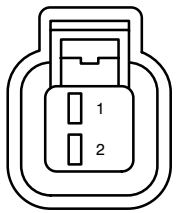

F02069

Pin	Circuit	Circuit function
1	802 (OG/RD)	Speaker, right rear (18808) +
2	803 (BN/PK)	Speaker, right rear (18808) -

C402a (BK)

18C673

Rear window defrost grid (18C618)

F01029

Pin	Circuit	Circuit function
1	185 (BK)	Rear window defrost relay, switched power

C402b (BK)

17A413

Rear window defrost grid (18C618)

F01029

Pin	Circuit	Circuit function
1	57 (BK)	Ground