C1274

7C078

A440
4R70W transmis-
sion

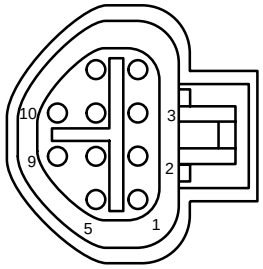

F10093

Pin	Circuit	Circuit function
1	361 (RD)	Voltage supplied in Start and Run (overload protected)
2	480 (VT/YE)	Torque Converter Clutch (TCC) solenoid
3	359 (GY/RD)	signal, return
4	–	not used
5	315 (VT/OG)	Shift solenoid B
6	237 (OG/YE)	Shift solenoid A
7	925 (WH/YE)	Injector pressure sensor, input
8	923 (OG/BK)	Transmission Fluid Temperature (TFT) sensor, input
9	–	not used
10	–	not used

C1275

9D930

B41
Camshaft position
sensor (6B288)

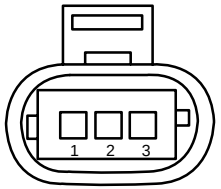

Pin	Circuit	Circuit function
1	796 (LB)	Camshaft position sensor (6B288), signal, return
2	351 (BN/WH)	Reference, voltage
3	795 (DG)	Camshaft position sensor (6B288), to, Powertrain Control Module (PCM) (12A650)

C1276

9D930

B227
Engine Coolant
Temperature (ECT)
sender

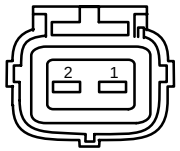

F02099

Pin	Circuit	Circuit function
1	451 (YE/RD)	Ground
2	39 (RD/WH)	Engine Coolant Temperature (ECT) sender, input

C1278

2B516

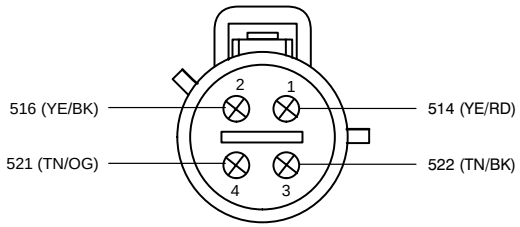

F04269

14406

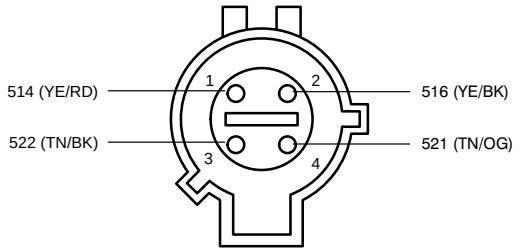

F04075