C360

14K024

P91
Central Junction
Box (CJB) (14A068)

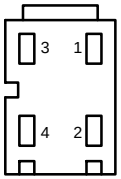

F04029

Pin	Circuit	Circuit function
1	15-FA27 (GN/WH) + 15-TA33 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected)
	15-TA33 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected)
2	15S-FA1 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected), Switched
3	29-TA34 (OG/YE)	Voltage supplied at all times (overload protected)
	29-AA17 (OG/WH) + 29-TA34 (OG/YE)	Voltage supplied at all times (overload protected)
4	15S-FA23 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected), Switched

C361

14K024

P91
Central Junction
Box (CJB) (14A068)

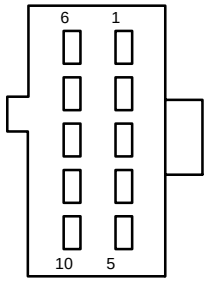

F10002.01

Pin	Circuit	Circuit function
1	29S-LH6 (OG/BK)	Voltage supplied at all times (overload protected), Switched
2	29-GG14 (OG) + 29-GL6 (OG)	Voltage supplied at all times (overload protected)
3	15-DA3 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected)
4	30S-DD40 (RD/GN)	Voltage supplied at all times (not overload protected), Switched
5	–	not used
6	30-DD32 (RD)	Voltage supplied at all times (not overload protected)
7	29-LE10 (OG/GN) + 29-LE21 (OG/BK)	Voltage supplied at all times (overload protected)
8	30S-DD37 (RD/YE)	Voltage supplied at all times (not overload protected), Switched
	30S-DA37 (RD/YE)	Voltage supplied at all times (not overload protected), Switched
9	30S-DD38 (RD/BU)	Voltage supplied at all times (not overload protected), Switched
10	31-FA23A (BK)	Ground