C2089

14401

Adjustable pedal switch

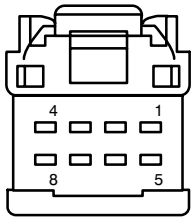

F08321

Pin	Circuit	Circuit function
1	31-AL19 (BK/GN)	Illumination, Ground
2	64S-AL19 (BU/BK)	Illumination, feed
3	32-AL19 (WH/GN)	Forward, switch sense
4	31-AL19A (BK/GN)	Ground
5	–	not used
6	–	not used
7	34-AL19 (BU/BK)	Rearward, switch sense
8	–	not used

C2090

14N118

Adjustable pedal memory potentiometer

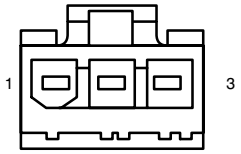

F03111

Pin	Circuit	Circuit function
1	7-AL18 (YE/RD)	Reference voltage
2	8-AL18 (WH/RD)	Adjustable pedal memory potentiometer, signal
3	9-AL18 (BN/RD)	Signal return

C2250 (GN)

14401

Steering column position switch

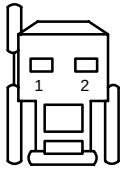

F02096

Pin	Circuit	Circuit function
1	9-AL10 (BN)	Signal return
2	8-AL10 (WH)	Steering column position switch, Reference voltage