C1195

14398

P133
Vapor management valve

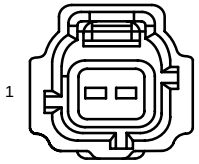

F02105

Pin	Circuit	Circuit function
1	391 (RD/YE)	Voltage supplied in Start and Run (overload protected)
2	191 (LG/BK)	Powertrain Control Module (PCM) (12A650), EVAP canister purge valve

C1196

12B637

U1
Ignition transformer capacitor

F01031

Pin	Circuit	Circuit function
1	20 (WH/LB)	Voltage supplied in Start and Run (overload protected)

C1209

14398

K369
IVD stop lamp relay

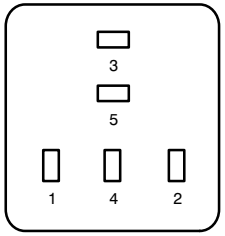

F05110

Pin	Circuit	Circuit function
1	1205 (BK)	Coil Ground
2	810 (RD/LG)	Switched power
3	10 (LG/RD)	Voltage supplied at all times (overload protected)
4	–	not used
5	511 (LG)	Switched power to High mounted stoplamp (13A613)

C1220

14398

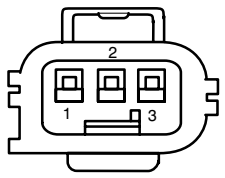

F03117

2B559

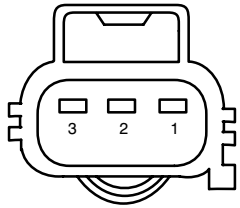

F03195

(1) 3603 (RD)
(2) 3600 (RD/WH)
(3) 3601 (WH/RD)