C4206

14A005

Electronic park brake motor

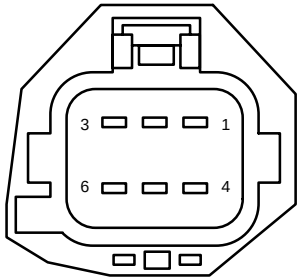

F06323

Pin	Circuit	Circuit function
1	32-CG19 (WH/VT)	Electronic park brake motor -
2	–	not used
3	7-CG20 (YE/VT)	Electronic park brake motor, tone driver
4	8-CG20 (WH/VT)	Electronic park brake motor, signal
5	9-CG20 (BN/WH)	Signal return
6	33-CG19 (YE/VT)	Electronic park brake motor +

C4208a

14A005

Radio amplifier

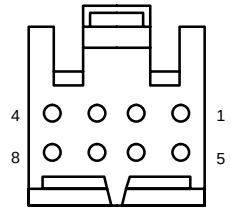

F08126

Pin	Circuit	Circuit function
1	10-MD18A (GY)	Speaker, right rear (18808) -
2	10-MD17A (GY/RD)	Speaker, right front (18808) -
3	10-MD11A (GY/WH)	Speaker, left rear (18808) -
4	10-MD10A (GY/BK)	Speaker, left front (18808) -
5	8-MD18A (WH)	Speaker, right rear (18808) +
6	8-MD17A (WH/RD)	Speaker, right front (18808) +
7	8-MD11A (WH/VT)	Speaker, left rear (18808) +
8	8-MD10A (WH/BK)	Speaker, left front (18808) +