Moonroof adjust switch -19

Schematic

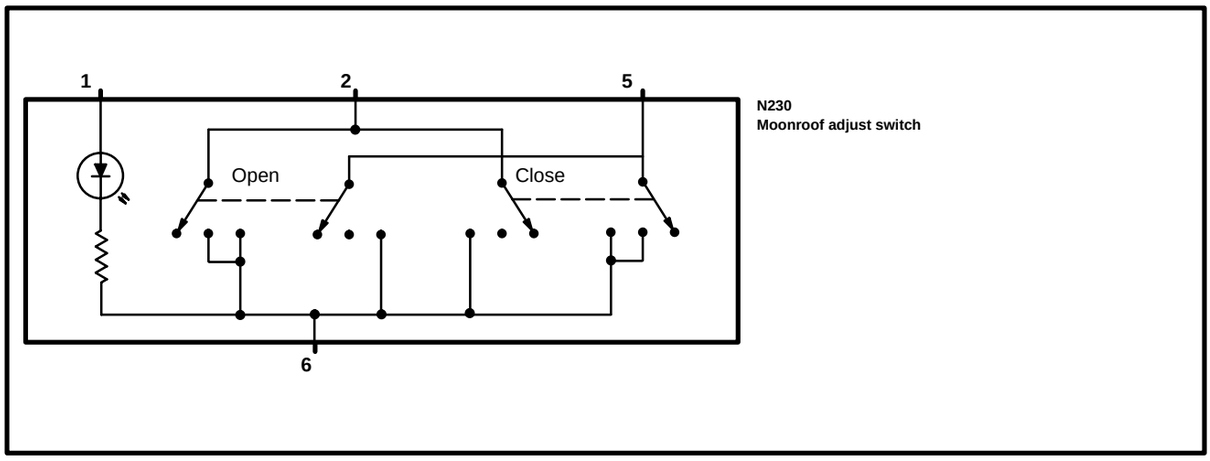

Terminal locations

C522
N230

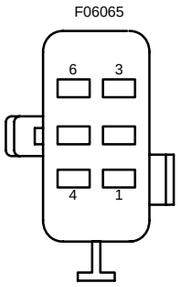

Component testing procedure

Circuit to test	Connect self–powered test light or ohmmeter to terminals	Move switch to these positions	A good switch will indicate
Moonroof circuit	2 and 6	Neutral	Open circuit
		Up/close	Closed circuit
		Down/open	Closed circuit
	5 and 6	Neutral	Open circuit
		Up/close	Closed circuit
		Down/open	Closed circuit