* Early production
** Late production

C167 (BK)

15525

Digital Transmission Range (DTR) sensor (7F293)

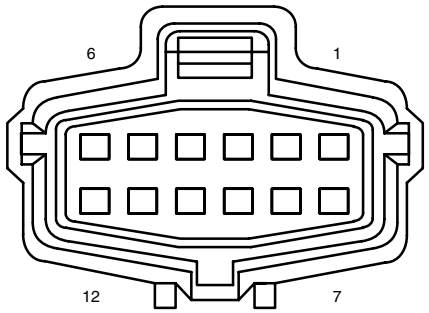

F12040

Pin	Circuit	Circuit function
1	–	not used
2	359 (GY/RD)	signal, return
3	199 (LB/YE)	Digital Transmission Range (DTR) sensor, TR3A
4	1144 (YE/BK)	Digital Transmission Range (DTR) sensor, TR1
5	1145 (LB/BK)	Digital Transmission Range (DTR) sensor, TR2
6	1143 (WH/BK)	Digital Transmission Range (DTR) sensor, TR4
7	–	not used
8	–	not used
9	295 (LB/PK)	Voltage supplied in Start and Run (overload protected)
10	33 (WH/PK)	switched power, to starter solenoid
11	*1789 (VT/WH)	signal, Voltage supplied in reverse
	**140 (BK/PK)	signal, Voltage supplied in reverse
12	1093 (TN/RD)	Power, Hot in Start with Park or Neutral

C168 (BK)

15525

4R100 transmission

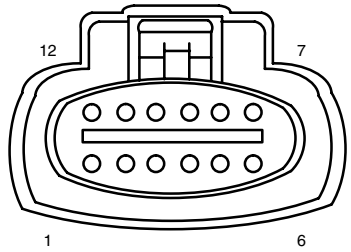

F12133

Pin	Circuit	Circuit function
1	1138 (VT/WH)	Voltage supplied in Start and Run (overload protected)
2	315 (VT/OG)	Shift solenoid B
3	237 (OG/YE)	Shift solenoid A
4	480 (VT/YE)	Torque Converter Clutch (TCC) solenoid
5	924 (BN/OG)	Powertrain Control Module (PCM) (12A650), to transmission coast clutch solenoid
6	–	not used
7	923 (OG/BK)	Transmission Fluid Temperature (TFT) sensor, input
8	359 (GY/RD)	signal, return
9	–	not used
10	–	not used
11	925 (WH/YE)	Electronic Pressure Control (EPC) solenoid, control
12	1138 (VT/WH)	Voltage supplied in Start and Run (overload protected)

C171 (GN)

12B637

Heated Oxygen Sensor (HO2S) #11 (9F472)

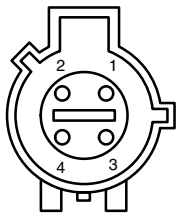

F04124

Pin	Circuit	Circuit function
1	391 (RD/YE)	Voltage supplied in Start and Run (overload protected)
2	387 (RD/WH)	Heated Oxygen Sensor (HO2S) #11 (9F472), heater
3	359 (GY/RD)	signal, return
4	74 (GY/LB)	Heated Oxygen Sensor (HO2S) #11 (9F472), input