C199 (GY)

14A103

B212
Heated Oxygen Sensor
(HO2S), rear

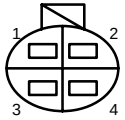

F04159

Pin	Circuit	Circuit function
1	AW43 (YE)	signal, return
2	AW41 (WH)	Heated Oxygen Sensor (HO2S), rear, input
3	AW42 (BK)	Ground
4	AW40 (BU/YE)	Voltage supplied in Start and Run (overload protected)

C200 (WH)

14A103

M111
Windshield wiper
motor (17508)

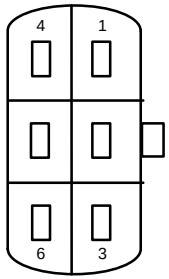

F06153

Pin	Circuit	Circuit function
1	WA04 (BU/OG)	switched power, output
2	WA05 (BN/WH)	switched power, output
3	–	not used
4	WAE2 (BK)	Ground
5	WA06 (RD)	switched power, input
6	WA01 (BK/WH)	Voltage in Run or Accessory (overload protected)

C202 (BU)

14A103

P91
Central Junction
Box (CJB) (14A068)



F02171

Pin	Circuit	Circuit function
1	DA19 (WH/RD)	Voltage supplied at all times (overload protected)
2	DA07 (WH/BU)	Voltage supplied at all times (overload protected)

C203 (BK)

14N104

P53
Climate control pan-
el, front

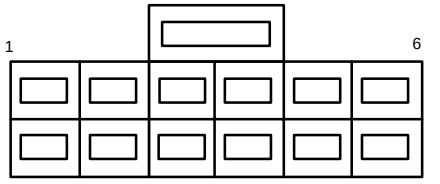

F12093

Pin	Circuit	Circuit function
1	IH91 (PK/BK)	Illumination, Ground
2	–	not used
3	HA02 (BN/WH)	A/C demand signal
4	HA05 (YE/RD)	Front blower motor relay, control
5	HA09 (WH)	Air inlet door actuator
6	HAE2 (BK)	Ground
7	IH01 (PK)	Illumination, feed
8	–	not used
9	–	not used
10	HA01 (GY)	Voltage in Run (overload protected)
11	HA11 (LG)	Mode actuator
12	HA06 (YE/BK)	Air inlet door actuator