C287

19A657

B202
Autolamp sensor

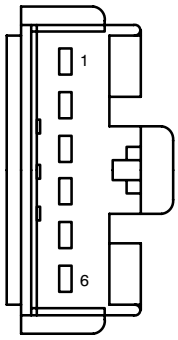

F06086

Pin	Circuit	Circuit Function
1	31-LE42 (BK)	Ground
2	10-GL6 (GY/VT)	Signal 2 (Y–direction, reverse, downward)
3	29-GL6 (OG)	Voltage supplied at all times (overload protected)
4	8-LE42 (WH/BU)	Sensor signal
5	–	not used
6	15-LE42 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected)

C288

19D887

M3
Heater blower motor

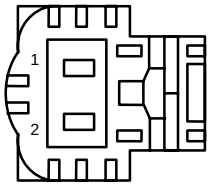

F02025

Pin	Circuit	Circuit Function
1	31S-FA18 (BK/RD)	Ground, Switched
2	30S-FA18 (RD/BK)	Voltage supplied at all times (not overload protected), Switched

C289

19D887

M207
Fresh/recirculation door actuator

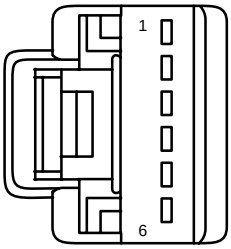

F06179

Pin	Circuit	Circuit Function
1	33-FB8 (YE/RD)	Switched between: Battery voltage, Ground or Open
2	–	not used
3	8-FB8 (WH/RD)	Sensor signal
4	7-FB8 (YE/RD)	Voltage D.C. supplied at all times (sensor)
5	9-FB8 (BN/RD)	Sensor signal return (reference/ground)
6	32-FB8 (WH/RD)	Switched between: Battery voltage, Ground or Open

C295

19D887

M224
Cool air bypass actuator

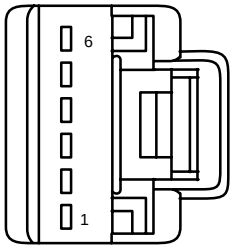

F06179

Pin	Circuit	Circuit Function
1	33-FB2 (WH/RD)	Switched between: Battery voltage, Ground or Open
2	–	not used
3	8-FB2 (WH/RD)	Sensor signal
4	9-FB2 (BN/RD)	Sensor signal return (reference/ground)
5	7-FB2 (YE/RD)	Voltage D.C. supplied at all times (sensor)
6	33-FB2 (YE/RD)	Switched between: Battery voltage, Ground or Open