C4055

13412

M266
Tonneau cover latch actuator, right (84442A70)

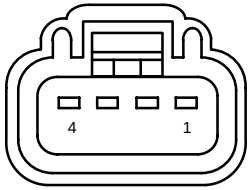

F04221

Pin	Circuit	Circuit function
1	1605 (VT/WH)	Tonneau cover control module (14B450), Solenoid, feed
2	57 (BK)	Ground
3	1625 (DB/WH)	Tonneau cover control module (14B450), switch, Sensor
4	–	not used

C4056

13412

M265
Tonneau cover latch actuator, left (84442A71)

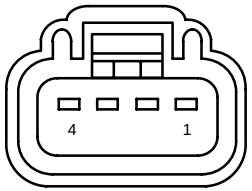

F04221

Pin	Circuit	Circuit function
1	1606 (DG/WH)	Tonneau cover control module (14B450), Solenoid, feed
2	57 (BK)	Ground
3	1622 (DG/VT)	Tonneau cover control module (14B450), switch, Sensor
4	–	not used

C4057a (GY)

13412

M270
Tonneau cover motor assembly, right (84406A12)

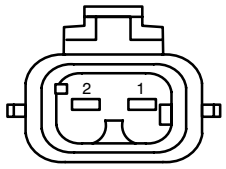

F02441

Pin	Circuit	Circuit function
1	1599 (TN/LB)	Tonneau cover control module (14B450), to, Tonneau cover motor assembly, right (84406A12)
2	1601 (WH/PK)	Tonneau cover control module (14B450), to, Tonneau cover motor assembly, right (84406A12)

C4057b (BK)

13412

M270
Tonneau cover motor assembly, right (84406A12)

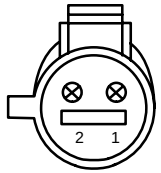

F02373

Pin	Circuit	Circuit function
1	1607 (VT/LG)	Tonneau cover control module (14B450), to, Tonneau cover motor assembly, right (84406A12)
2	1608 (OG/LB)	Tonneau cover control module (14B450), to, Tonneau cover motor assembly, right (84406A12)

C4058

14A227

E253
Tonneau cover lamp (8415550)



F03243

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	53 (BK/LB)	Interior lamp relay, switched power, output
3	–	not used

C4059

14A227

N492
Tonneau cover safety strip, right (14B457)



F02062

Pin	Circuit	Circuit function
1	1626 (LG/RD)	Safety pinch switch, signal
2	1627 (BK/OG)	Safety pinch switch, return