## C450 (BK)

**14290**

Evaporative emission (EVAP) canister vent valve (9F945)

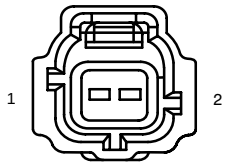


F02101

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 391 (RD/YE) | Voltage supplied in Start and Run (overload protected) |
| 2 | 91 (VT/WH) | Canister vent |

## C451 (GN)

**14A005**

Reversing lamp, left (13411)

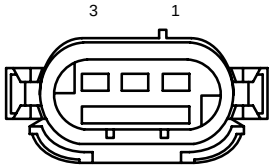


F03099

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 1455 (GY/RD) | Voltage supplied at all times (overload protected) |
| 2 | – | not used |
| 3 | 1362 (DG/OG) | Switched ground |

## C457 (WH)

**14A583**

Liftgate lock actuator

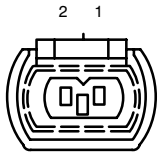


F02116

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 1384 (LB) | Door lock actuator +/– |
| 2 | 1383 (RD) | Door lock actuator +/– |

## C458 (BK)

**14A583**

Liftgate ajar switch, left

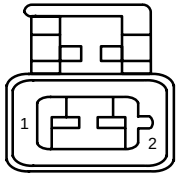


F02379

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 1351 (TN) | Liftgate ajar switch, left, to, Rear Electronic Module (REM) |
| 2 | 346 (BK/WH) | Switched ground |

## C459 (BK)

**14A583**

Liftgate ajar switch, right

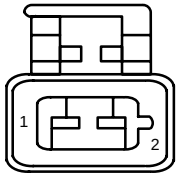


F02379

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 346 (BK/WH) | Door ajar switch, right rear |
| 2 | 1205 (BK) | Ground |

## C461 (GN)

**14A583**

Reversing lamp, right (13411)

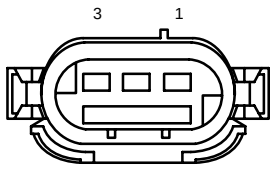


F03099

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 1455 (GY/RD) | Voltage supplied at all times (overload protected) |
| 2 | – | not used |
| 3 | 1367 (WH/YE) | Switched ground |