C3059

14A488

B266
Side air curtain sensor, driver 2



F02221

Pin	Circuit	Circuit function
1	1517 (RD/OG)	Air bag, – driver side impact, – crash sensor to module, – return
2	1516 (YE/WH)	Air bag, – driver side impact, – crash sensor to module, – feed

C3060

14A488

B268
Side air curtain sensor, passenger 2



F02221

Pin	Circuit	Circuit function
1	1519 (LG/RD)	Air bag, – driver side impact, – crash sensor to module, – return
2	1518 (RD/WH)	Air bag, – driver side impact, – crash sensor to module, – feed

C3065

14A488/14C719

N466
Safety belt buckle switch, driver

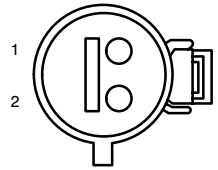

F02529

Pin	Circuit	Circuit function
1	1203 (BK/LB)	Ground
2	85 (BN/LB)	Safety belt buckle switch (10B924), input