-2

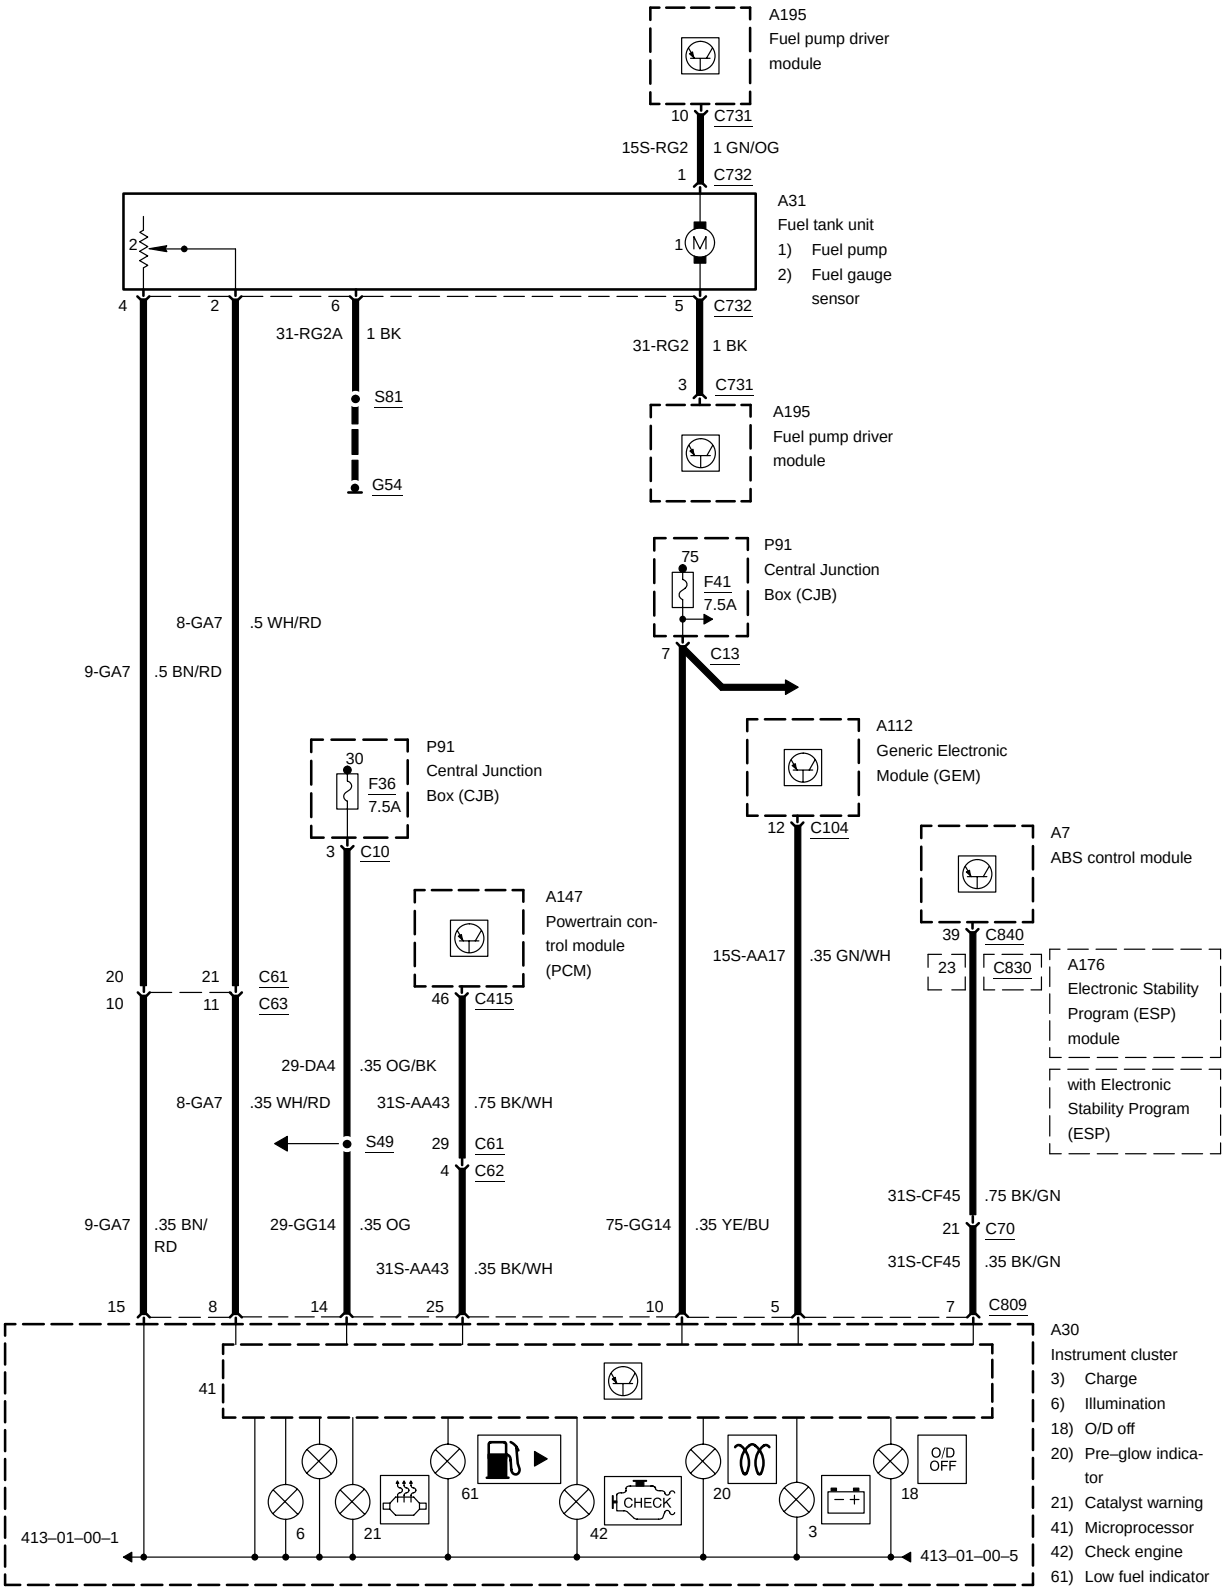
A195
Fuel pump driver module
10 C731
15S-RG2 1 GN/OG
1 C732
A31
Fuel tank unit
1) Fuel pump
2) Fuel gauge sensor
2
1 M
4 2 6 5 C732
31-RG2A 1 BK
31-RG2 1 BK
3 C731
S81
G54
A195
Fuel pump driver module
P91
Central Junction Box (CJB)
75
F41
7.5A
7 C13
8-GA7 .5 WH/RD
9-GA7 .5 BN/RD
A112
Generic Electronic Module (GEM)
12 C104
P91
Central Junction Box (CJB)
30
F36
7.5A
3 C10
A147
Powertrain control module (PCM)
A7
ABS control module
39 C840
23 C830
A176
Electronic Stability Program (ESP) module
with Electronic Stability Program (ESP)
15S-AA17 .35 GN/WH
20 21 C61
10 11 C63
46 C415
29-DA4 .35 OG/BK
8-GA7 .35 WH/RD
31S-AA43 .75 BK/WH
S49
29 C61
4 C62
31S-CF45 .75 BK/GN
21 C70
31S-CF45 .35 BK/GN
9-GA7 .35 BN/RD
29-GG14 .35 OG
31S-AA43 .35 BK/WH
75-GG14 .35 YE/BU
15 8 14 25 10 5 7 C809
A30
Instrument cluster
3) Charge
6) Illumination
18) O/D off
20) Pre–glow indicator
21) Catalyst warning
41) Microprocessor
42) Check engine
61) Low fuel indicator
41
6
21
61
42
20
3
18
O/D OFF
CHECK
413–01–00–1
413–01–00–5