C1136

12B637

T1
Ignition coil

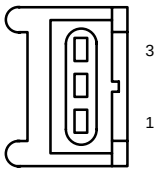

F03014

Pin	Circuit	Circuit Function
1	95 (TN/WH)	Ignition coil
2	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)
3	96 (TN/OG)	Ignition coil

C1144

12B637

Y111
Injector 4

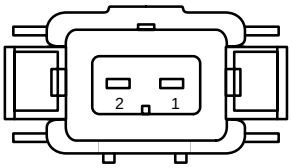

F02203

Pin	Circuit	Circuit Function
1	558 (BN/LB)	Fuel injector 4, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C1141

12B637

Y108
Injector 1

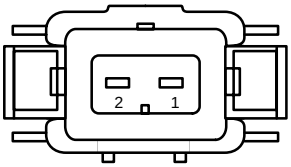

F02203

Pin	Circuit	Circuit Function
1	555 (TN)	Fuel injector 1, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C1160

12B637

M251
EGR stepper motor

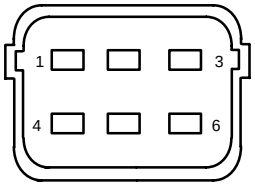

F06245

Pin	Circuit	Circuit Function
1	338 (TN/RD)	EGR stepper motor – B2
2	34 (LB/OG)	Voltage supplied in Start and Run (overload protected)
3	337 (GY/RD)	EGR stepper motor – B1
4	335 (VT/OG)	EGR stepper motor – A1
5	34 (LB/OG)	Voltage supplied in Start and Run (overload protected)
6	336 (DG)	EGR stepper motor – A2

C1142

12B637

Y109
Injector 2

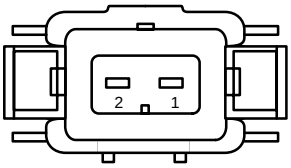

F02203

Pin	Circuit	Circuit Function
1	556 (WH)	Fuel injector 2, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C1143

12B637

Y110
Injector 3

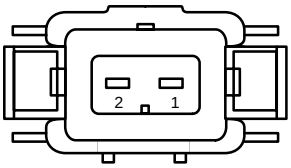

F02203

Pin	Circuit	Circuit Function
1	557 (BN/YE)	Fuel injector 3, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C1161

12B637

A261
Swirl control monitor

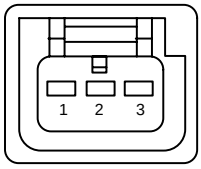

F03201

Pin	Circuit	Circuit Function
1	1107 (WH)	Swirl control monitor, to, Power-train Control Module (PCM)
2	359 (GY/RD)	signal, return
3	351 (BN/WH)	Reference, voltage