C274b

14A005

A262
Central security module

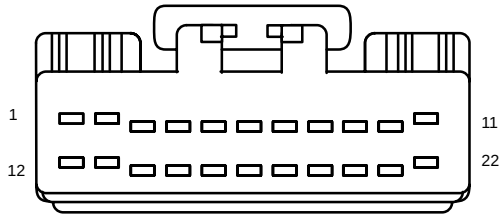

F22017

Pin	Circuit	Circuit function
1	195 (TN/WH)	Park lamp relay – fused feed
2	14 (BN)	Power, Exterior lamps
3	7 (LG/YE)	Headlamp relay, control
4	–	not used
5	–	not used
6	267 (BN/LG)	Driver seat module (14C718)
7	1628 (WH/RD)	Tonneau cover control module (14B450), top, Up
8	–	not used
9	120 (PK/LG)	Door unlock relay, control
10	1013 (BN/LG)	GEM/RAP illumination, signal
11	118 (PK/OG)	Door unlock, output
12	517 (BK/WH)	Voltage supplied at all times (overload protected)
13	875 (BK/LB)	Ground
14	–	not used
15	66 (LB)	Key pad illumination
16	–	not used
17	119 (PK/YE)	Door lock relay, control
18	268 (BK/OG)	Driver seat module (14C718)
19	–	not used
20	1629 (PK/LG)	Tonneau cover control module (14B450), top, Down
21	–	not used
22	117 (PK/BK)	Door lock, output

C278

14401

N82
Brake pedal position switch (13480)



F05111

Pin	Circuit	Circuit function
1	574 (BK/PK)	Ground
2	810 (RD/LG)	Brake pedal position switch (13480), input
3	1001 (WH/YE)	Voltage supplied at all times (overload protected)
4	511 (LG)	Brake pedal position switch (13480), to stoplamps
5	10 (LG/RD)	Voltage supplied at all times (overload protected)

C280

14401

N452
Traction control switch

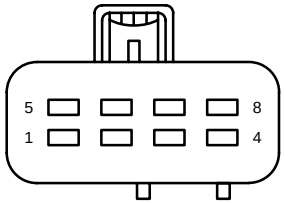

F08088

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	959 (GY)	Traction assist switch, feed, to ABS control module
3	–	not used
4	959 (GY)	Traction assist switch, feed, to ABS control module
5	–	not used
6	294 (WH/LB)	Voltage supplied in Start and Run (overload protected)
7	57 (BK)	Ground
8	19 (LB/RD)	Voltage supplied at all times (overload protected)