PIN	CIRCUIT	CIRCUIT FUNCTION
93	387 (RD/WH)	Heated Oxygen Sensor (HO2S) #11 Heater
94	388 (YE/LB)	Heated Oxygen Sensor (HO2S) #21 Heater
95	389 (WH/BK)	Heated Oxygen Sensor (HO2S) #12 Heater
96	390 (TN/YE)	Heated Oxygen Sensor (HO2S) #22 Heater
97	361 (RD)	Vehicle Power (VPWR)
98	562 (LB)	Fuel Injector #8 Control
99	560 (LG/OG)	Fuel Injector #6 Control
100	558 (BN/LB)	Fuel Injector #4 Control
101	556 (WH)	Fuel Injector #2 Control
102	1274 (DG/WH)	Dual Knock Sensor
103	570 (BK/WH)	Power Ground
104	1026 (PK/WH)	Coil on Plug #2

4.6L

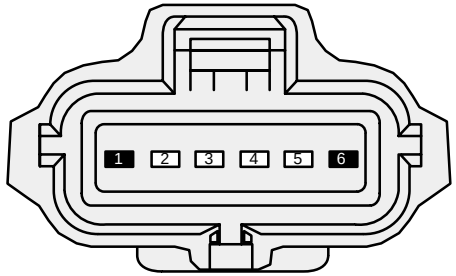

C1026

MASS AIR FLOW (MAF) SENSOR

PIN	CIRCUIT	CIRCUIT FUNCTION
1	–	NOT USED
2	361 (RD)	Power (Hot in Start or Run)
3	570 (BK/WH)	Ground
4	968 (TN/LB)	MAF Sensor Signal Return
5	967 (LB/RD)	MAF Signal Out
6	–	NOT USED

CONNECTOR REFERENCE LIST

CONNECTOR	SECTION-PAGE
C157	31-4
C182	29-5, 30-5
C183	29-5
C193	30-5
C228	14-3
C237	62-6
C238	62-6
C242	13-29
C243	13-28
C261	130-11
C267	59-7
C295	41-5