C4226

13A409

Parking Aid Module
(PAM) (15K866)

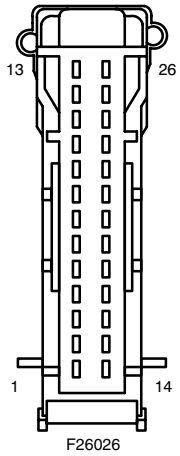

Late production, Expedition

Pin	Circuit	Circuit function
1	1003 (LG/YE)	Voltage supplied in Start and Run (overload protected)
2	–	not used
3	875 (BK/LB)	Ground
4	–	not used
5	70 (LB/WH)	ISO Bus
6	–	not used
7	1435 (DG/VT)	Parking aid, defeat, switch, signal
8	–	not used
9	140 (BK/PK)	Voltage supplied in reverse

Pin	Circuit	Circuit function
10	1442 (DG/WH)	Parking Aid Module (PAM) (15K866), to, Parking aid sensor, inner left (15K859), input
11	1441 (WH/LG)	Parking Aid Module (PAM) (15K866), to, Parking aid sensor, outer left (15K859), input
12	–	not used
13	–	not used
14	1437 (BK/PK)	Parking Aid Module (PAM) (15K866), to, Parking aid speaker (–)
15	1439 (BN/PK)	Parking Aid Module (PAM) (15K866), Sensor, Power
16	1440 (DG/YE)	Parking Aid Module (PAM) (15K866), Sensor, return
17	1438 (DG)	Parking Aid Module (PAM) (15K866), to, Parking aid speaker (+)
18	–	not used
19	1436 (VT/OG)	Parking aid, indicator, control
20	–	not used
21	689 (DB)	Parking aid, mute, signal
22	–	not used
23	1443 (WH/LB)	Parking Aid Module (PAM) (15K866), to, Parking aid sensor, inner right (15K859), input
24	1444 (DB/YE)	Parking Aid Module (PAM) (15K866), to, Parking aid sensor, outer right (15K859), input
25	–	not used
26	–	not used