C525

14A584

Door lock actuator,
left front

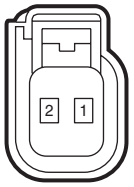

YF1T-14A464-TA (F)

Pin	Circuit	Circuit Function
1	117 (PK/BK)	Door lock motor (lock)
2	163 (RD/OG)	Keyless door lock output (driver) from module

C526

14A584

Door ajar switch,
left front

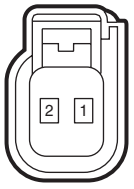

YF1T-14A464-GA (F)

Pin	Circuit	Circuit Function
1	1205 (BK)	General ground (type 4 ground)
2	765 (YE/BK)	Module, GEM to drivers door ajar lamp

C527

14A488

Exterior rear view
mirror switch



93BG-14489-GHA (F)

Pin	Circuit	Circuit Function
1	1479 (DB/OG)	Memory mirror switch vertical left
2	1475 (PK/OG)	Memory mirror switch vertical right
3	1477 (YE/BK)	Memory mirror switch common
4	1205 (BK)	General ground (type 4 ground)
5	1478 (DG/OG)	Memory mirror switch horizontal right
6	956 (OG/LG)	Mirror switch +
7	1476 (RD/OG)	Memory mirror switch horizontal left
8	—	not used