PIN	CIRCUIT	CIRCUIT FUNCTION
91	63 (LG/BK)	Signal Return
92	*351 (GN)	Brake Pedal Position (BPP) Switch Input
93	95 (OG/BK)	Heater Oxygen Sensor (HO2S) #11 (Front Heater)
94	–	NOT USED
95	97 (VT)	Heater Oxygen Sensor (HO2S) #12 (Rear Heater)
96	–	NOT USED
97	101 (WH/RD)	PCM Relay Power (Start or Run)
98	–	NOT USED
99	–	NOT USED
100	115 (GN/OG)	Injector #4
101	116 (VT/YE)	Injector #2
102	–	NOT USED
103	999 (BK/YE)	Ground
104	–	NOT USED

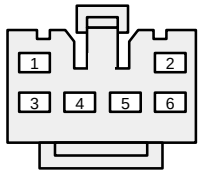

C315 (WHITE)
FUEL PUMP MODULE

PIN	CIRCUIT	CIRCUIT FUNCTION
1	118 (BU/BK)	Fuel Pump Driver Module
2	56 (BK/GN)	Ground
3	161 (YE/BN)	Fuel Gauge Signal
4	118 (BU/BK)	Fuel Pump Driver Module
5	119 (BU/WH)	Fuel Pump Driver Module
6	119 (BU/WH)	Fuel Pump Driver Module

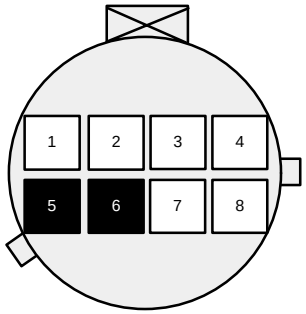

C176
MASS AIR FLOW (MAF) SENSOR

PIN	CIRCUIT	CIRCUIT FUNCTION
1	63 (LB/BK)	Signal Return
2	87 (OG/BU)	Powertrain Control Module (PCM) MAF Return
3	143 (BN/BK)	Powertrain Control Module (PCM) MAF Signal
4	109 (WH/GN)	Powertrain Control Module (PCM) (IAT)
5	–	NOT USED
6	–	NOT USED
7	101 (WH/RD)	PCM Power Relay
8	999 (BK/YE)	Ground