C2016

14B242

A39
Clock (15000)

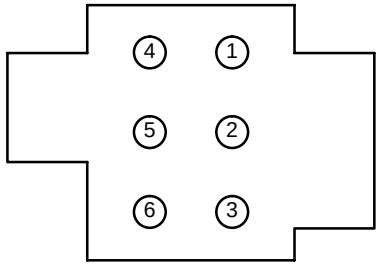

F06265

Pin	Circuit	Circuit Function
1	–	not used
2	19 (LB/RD)	Illumination
3	–	not used
4	–	not used
5	57 (BK)	Ground
6	1110 (LG/PK)	Voltage supplied at all times (overload protected)

C2031

13A726

R42
Cigar lighter, front
(15055)

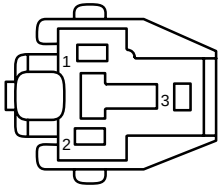

F03163

Pin	Circuit	Circuit Function
1	40 (LB/WH)	Voltage supplied at all times (overload protected)
2	19 (LB/RD)	Illumination
3	57 (BK)	Ground

C2056

14401

E76
Courtesy lamp, left
footwell

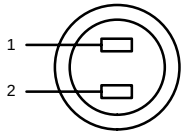

F02063

Pin	Circuit	Circuit Function
1	57 (BK)	Ground
2	53 (BK/LB)	Interior lamp, feed

C2057

14B242

E77
Courtesy lamp, right
footwell

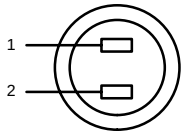

F02063

Pin	Circuit	Circuit Function
1	57 (BK)	Ground
2	53 (BK/LB)	Interior lamp, feed

C2064

14A005

N82
Brake pedal position
switch (13480)

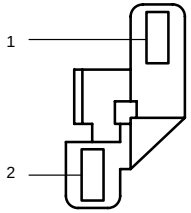

F02044

Pin	Circuit	Circuit Function
1	10 (LG/RD)	Voltage supplied at all times (overload protected)
2	511 (LG)	Brake pedal position switch (13480), to stoplamps