C185 (GY)

12B637

Fuel injector 5
(9F593)

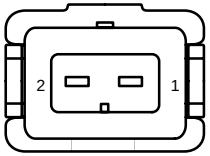

F02089

Pin	Circuit	Circuit function
1	559 (TN/BK)	Fuel injector 4, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C186 (GY)

12B637

Fuel injector 6
(9F593)

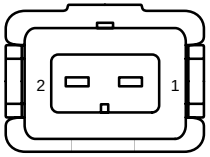

F02089

Pin	Circuit	Circuit function
1	560 (LG/OG)	Fuel injector 6, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C187 (GY)

12B637

Fuel injector 7
(9F593)

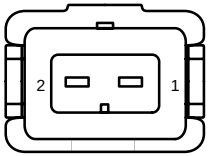

F02089

Pin	Circuit	Circuit function
1	561 (TN/RD)	Fuel injector 7, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C188 (GY)

12B637

Fuel injector 8
(9F593)

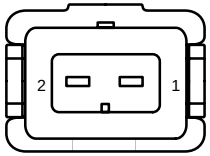

F02089

Pin	Circuit	Circuit function
1	562 (LB)	Fuel injector 8, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C189 (BK)

12B637/9D930

Throttle Position
Sensor (TPS)
(9B989)

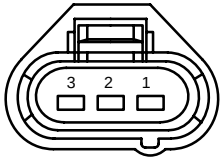

F03071

Pin	Circuit	Circuit function
1	351 (BN/WH)	Reference, voltage
2	355 (GY/WH)	Throttle Position Sensor (TPS) (9B989), input
3	359 (GY/RD)	signal, return

C191 (BK)

12B637

Intake Manifold Tun-
ing Valve (IMTV)

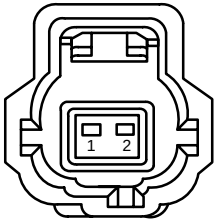

F02200

Pin	Circuit	Circuit function
1	361 (RD)	Voltage supplied in Start and Run (overload protected)
2	367 (BN)	Intake Manifold Tuning Valve (IMTV)