## C3098

**7C078**

B278
Output speed sensor

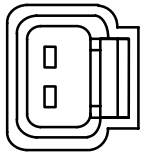

F02331

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 139 (GY/YE) | Powertrain Control Module (PCM) (12A650) – Crankshaft position sensor (6C315) – |
| 2 | 148 (YE/RD) | Speed control switch, return |

## C3099

**7C078**

B7
Engine speed sensor

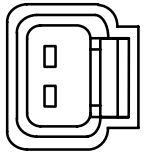

F02331

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 141 (RD/PK) | Injector pressure sensor, except 1,9 TDI unit injector engine |
| 2 | 150 (DG/WH) | Injector pressure sensor, except 1,9 TDI unit injector engine |

## C3100

**14405**

B80
Transmission speed sensor

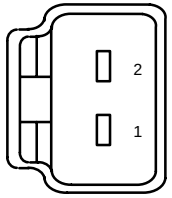


F02381

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 676 (PK/OG) | Vehicle Speed Sensor (VSS) – |
| 2 | 353 (LB) | Vehicle Speed Sensor (VSS) + |

## C3101

**7C078**

N19
Reversing lamps switch

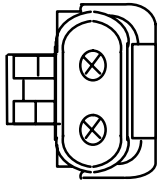

F02493

| Pin | Circuit | Circuit function |
|---|---|---|
| A | 295 (LB/PK) | Voltage in Run (overload protected) |
| B | 140 (BK/PK) | Voltage supplied in reverse |

## C3102

**7C078**

N624
Neutral switch



F02491

| Pin | Circuit | Circuit function |
|---|---|---|
| A | 32 (RD/LB) | Voltage supplied in Start (overload protected) |
| B | 325 (DG/OG) | Starter relay (11450), control |

## C3103

**7C078**

Y253
Downshift solenoid

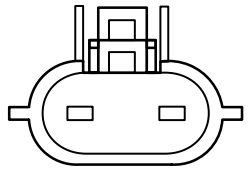

F02339

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 570 (BK/WH) | Ground |
| 2 | 175 (BK/YE) | Powertrain Control Module (PCM) (12A650), to, Generic Electronic Module (GEM) (14B205) |