C505

14B121

N204
Door lock switch,
driver side (14028)

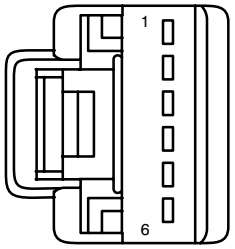

F006179

Pin	Circuit	Circuit function
1	8-AA10 (WH/BK)	Sensor signal
2	8-AA11 (WH/VT)	Sensor signal
3	–	not used
4	31-LH28 (BK)	Ground
5	–	not used
6	29S-LH28 (OG/YE)	Voltage supplied at all times (overload protected), Switched

C506

14B121

E177
Door entry lamp, left
front (13776)

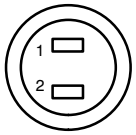

F02063

Pin	Circuit	Circuit function
1	29S-LC34 (OG/YE)	Voltage supplied at all times (overload protected), Switched
2	9-LC34 (BN)	Sensor signal return (reference/ground)

C510

14A005

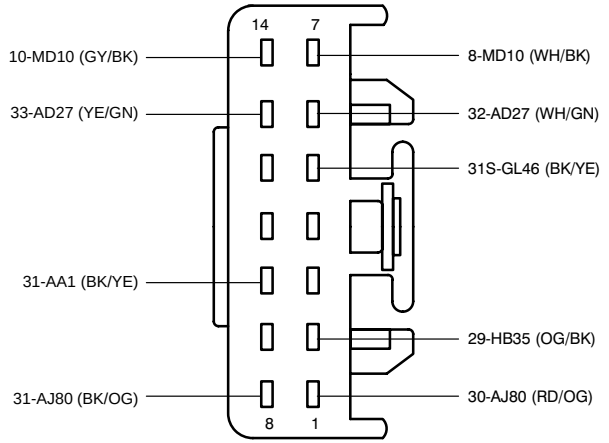

F14013

14631

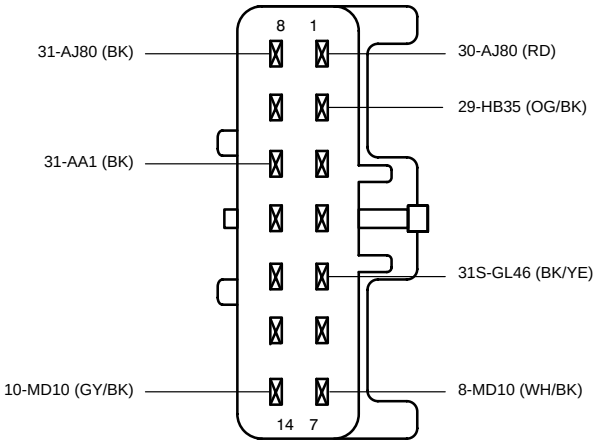

F14012