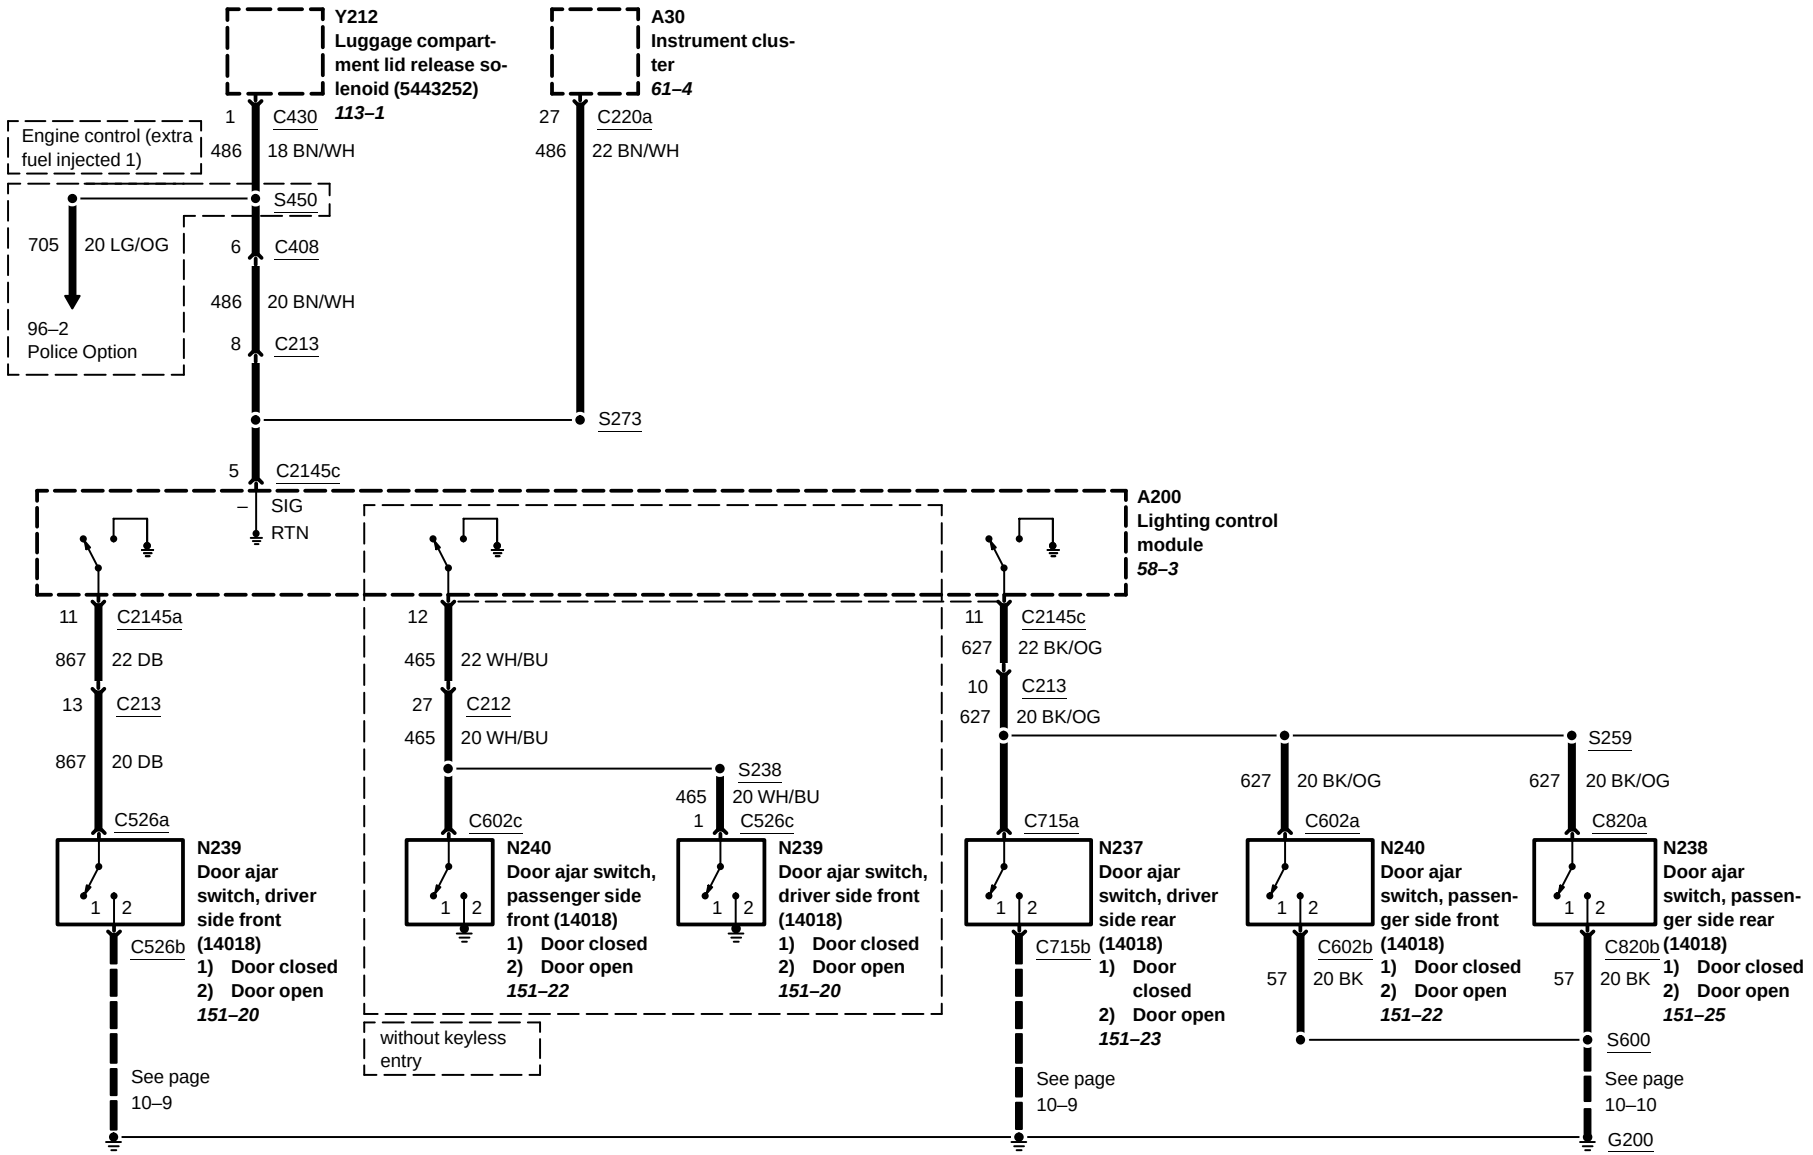
Y212
Luggage compartment lid release solenoid (5443252)
113–1
A30
Instrument cluster
61–4
1
C430
486
18 BN/WH
27
C220a
486
22 BN/WH
Engine control (extra fuel injected 1)
S450
705
20 LG/OG
6
C408
486
20 BN/WH
8
C213
96–2
Police Option
S273
5
C2145c
SIG
RTN
A200
Lighting control module
58–3
11
C2145a
867
22 DB
13
C213
867
20 DB
C526a
12
465
22 WH/BU
27
C212
465
20 WH/BU
S238
465
20 WH/BU
1
C526c
C602c
11
C2145c
627
22 BK/OG
10
C213
627
20 BK/OG
C715a
627
20 BK/OG
C602a
627
20 BK/OG
S259
C820a
C526b
C715b
C602b
57
20 BK
C820b
57
20 BK
S600
G200
N239
Door ajar switch, driver side front (14018)
1) Door closed
2) Door open
151–20
N240
Door ajar switch, passenger side front (14018)
1) Door closed
2) Door open
151–22
N239
Door ajar switch, driver side front (14018)
1) Door closed
2) Door open
151–20
N237
Door ajar switch, driver side rear (14018)
1) Door closed
2) Door open
151–23
N240
Door ajar switch, passenger side front (14018)
1) Door closed
2) Door open
151–22
N238
Door ajar switch, passenger side rear (14018)
1) Door closed
2) Door open
151–25
without keyless entry
See page 10–9
See page 10–9
See page 10–10