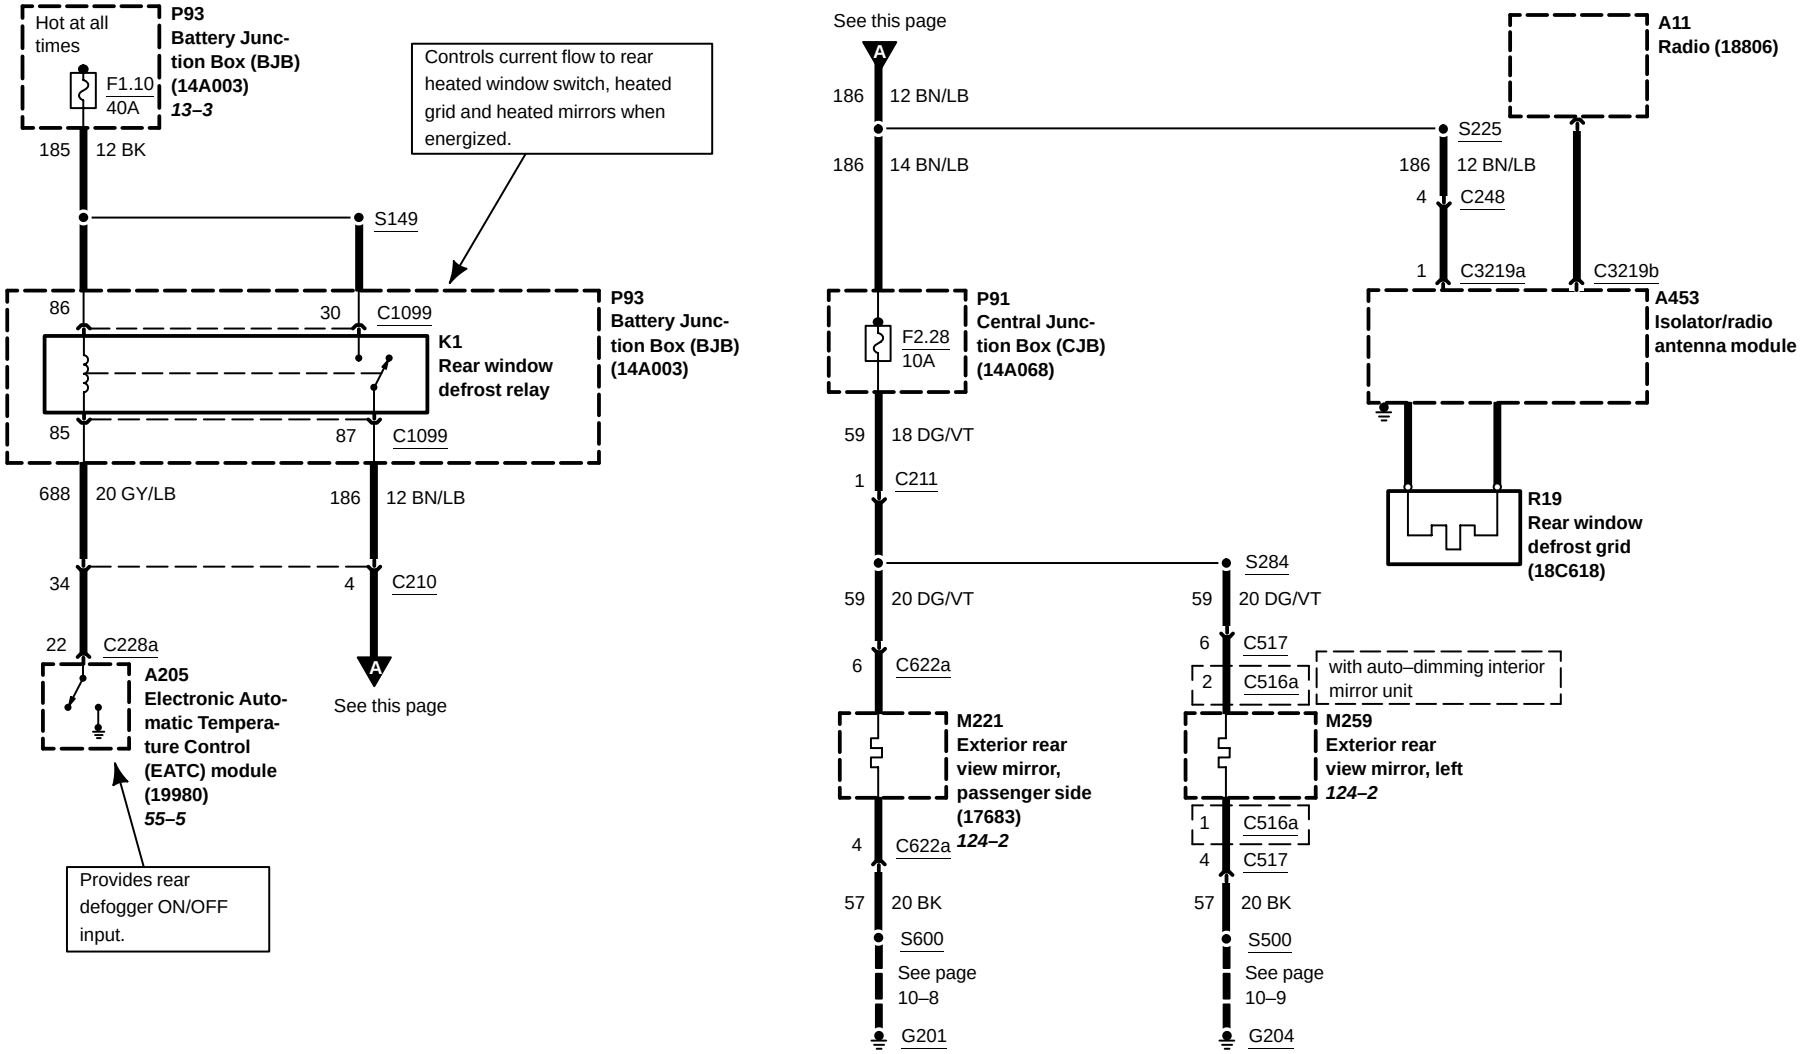
Hot at all times
P93 Battery Junction Box (BJB) (14A003) 13–3
F1.10 40A
185 12 BK
S149
Controls current flow to rear heated window switch, heated grid and heated mirrors when energized.
86
30 C1099
K1 Rear window defrost relay
85
87 C1099
P93 Battery Junction Box (BJB) (14A003)
688 20 GY/LB
186 12 BN/LB
34
4 C210
22 C228a
A205 Electronic Automatic Temperature Control (EATC) module (19980) 55–5
A
See this page
Provides rear defogger ON/OFF input.
See this page
A
186 12 BN/LB
186 14 BN/LB
P91 Central Junction Box (CJB) (14A068)
F2.28 10A
59 18 DG/VT
1 C211
59 20 DG/VT
6 C622a
M221 Exterior rear view mirror, passenger side (17683) 124–2
4 C622a
57 20 BK
S600
See page 10–8
G201
S225
186 12 BN/LB
4 C248
1 C3219a
C3219b
A11 Radio (18806)
A453 Isolator/radio antenna module
R19 Rear window defrost grid (18C618)
S284
59 20 DG/VT
6 C517
2 C516a
with auto–dimming interior mirror unit
M259 Exterior rear view mirror, left 124–2
1 C516a
4 C517
57 20 BK
S500
See page 10–9
G204