C823

12A522

B11
Vehicle Speed Sensor (VSS)

Duratec–VE, manual transmission

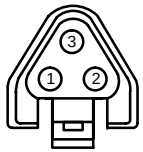

F03015

Pin	Circuit	Circuit function
1	15-RJ29 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected)
2	8-RJ29 (WH/BU)	Sensor signal
3	91-RJ29 (BK/OG)	Ground

C824

13A612

N82
Brake pedal position switch (13480)

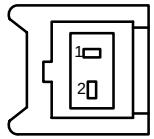

F02012

Pin	Circuit	Circuit function
1	15S-PG16 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected), Switched
2	15-PG6 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected)