C906

14A504

E31
Vanity mirror lamp,
right (04100)

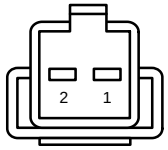

F02067

Pin	Circuit	Circuit function
1	705 (LG/OG)	Battery saver relay, switched power
2	57 (BK)	Ground

C907

14A504

E30
Vanity mirror lamp,
left (04100)

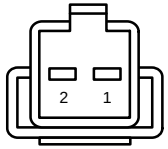

F02067

Pin	Circuit	Circuit function
1	705 (LG/OG)	Battery saver relay, switched power
2	57 (BK)	Ground

C908a

14334

E113
Map reading lamp,
left front (13466)

F01006

Pin	Circuit	Circuit function
1	401 (PK)	switched power, feed

C908b

14334

E113
Map reading lamp,
left front (13466)

F01006

Pin	Circuit	Circuit function
1	57 (BK)	Ground

C909

14A504

A279
Electronic Compass
(19A548)

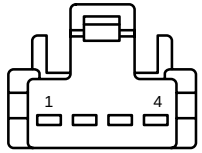

F04145

Pin	Circuit	Circuit function
1	875 (BK/LB)	Ground
2	1003 (GY/YE)	Interior lamp relay, control
3	703 (WH/OG)	Compass data (–)
4	702 (WH/BK)	Compass data (+)