C205

14401

Main light switch (11654)

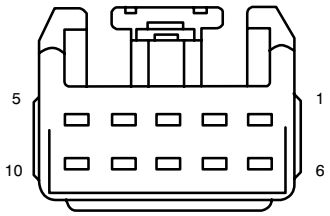

F10139

Pin	Circuit	Circuit function
1	31-LH26 (BK)	Ground
2	64S-LH26 (BU/BK)	Illumination, feed
3	7-LD7 (YE/RD)	fog lamps, On, Illumination
4	10-LE47 (GY/OG)	Autolamps, On, signal
5	8-LF14 (WH/BU)	Park lamps, On, signal
6	8-LD10 (WH/BK)	fog lamps, On, signal
7	9-LE29 (BN/GN)	Main light switch (11654), Signal return
8	–	not used
9	10-LE21 (GY/OG)	Off, signal
10	8-LE21 (WH/GN)	Low beams, On, signal

C206

14401

Instrument panel dimming module

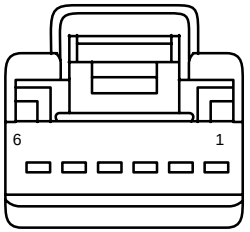

F06179

Pin	Circuit	Circuit function
1	–	not used
2	–	not used
3	64S-LE10 (BU/YE)	Illumination, feed
4	9-LE10 (BN/YE)	Instrument panel dimming module, common
5	10-LE10 (GY/BK)	Illumination dimmer switch, switch sense
6	8-LE10 (WH/BK)	courtesy lamps, On/Off signal, switch sense

C207

14401

Luggage compartment lid release switch



F02185

Pin	Circuit	Circuit function
1	8-AA30 (WH)	Luggage compartment lid release switch, switch sense
2	31-AA30 (BK/YE)	Ground