## C220b

### 14401

Instrument cluster
(10849)

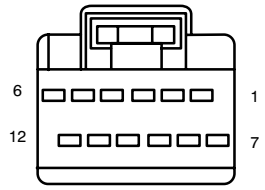


F12077

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 759 (LG/YE) | Door ajar switch, left rear |
| 2 | 760 (PK/LB) | Door ajar switch, right rear |
| 3 | 679 (GY/BK) | Vehicle Speed Sensor (VSS) + |
| 4 | 975 (BN/YE) | Four–wheel drive, high/low |
| 5 | 210 (LB) | Four–wheel drive, high/low |
| 6 | 85 (BN/LB) | Safety belt buckle switch (10B924), input |
| 7 | 688 (GY/LB) | Rear window defrost relay, control |
| 8 | 1332 (LB) | Accessory delay relay, control |
| 9 | 158 (BK/PK) | Key warning switch (11A127), input |
| 10 | 1083 (LB/BK) | Air bag, tone driver |
| 11 | 162 (LG/RD) | Parking brake switch (15A851) |
| 12 | 904 (LG/RD) | Generator/Battery indicator, control |

## C220c

* 6.0L Diesel
** all others

### 14401

Instrument cluster
(10849)

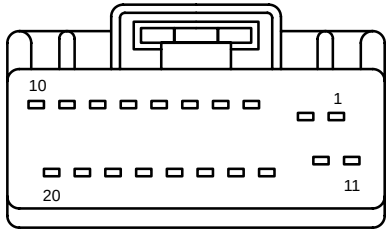


F20020

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 54 (LG/YE) | feed, from, Battery saver relay |
| 2 | 53 (BK/LB) | Interior lamp relay, switched power, output |
| 3 | 1269 (OG/RD) | Anti–theft ON indicator, control |
| 4 | 2 (WH/LB) | Right turn signal, input |
| 5 | 12 (LG/BK) | High beam indicator |
| 6 | 45 (YE/RD) | Coolant temperature sensor – 7.3L Diesel only |
| 7 | 39 (RD/WH) | Coolant temperature sensor – 7.3L Diesel only |
| 8 | *1308 (BN/OG) | Engine oil pressure indicator, control |
| 8 | **31 (WH/RD) | Engine oil pressure indicator, control |
| 9 | 512 (TN/LG) | Brake indicator, control |
| 10 | 531 (DG/YE) | Brake fluid level switch (2L414), signal |
| 11 | 705 (LG/OG) | Voltage supplied at all times (overload protected) |
| 12 | 785 (BK/LG) | Voltage supplied at all times (overload protected) |
| 13 | 676 (PK/OG) | logic ground |
| 14 | 608 (BK/YE) | Air bag indicator, control |
| 15 | 57 (BK) | Ground |
| 16 | 19 (LB/RD) | Instrument illumination |
| 17 | 203 (OG/LB) | Cruise set, indicator, control |
| 18 | 603 (DG) | Anti–lock brake indicator, control |
| 19 | 1002 (BK/PK) | Voltage in Run or Accessory (overload protected) |
| 20 | 640 (RD/YE) | Voltage supplied in Start and Run (overload protected) |