## C2100b

**14401**

A112
Generic Electronic Module (GEM)

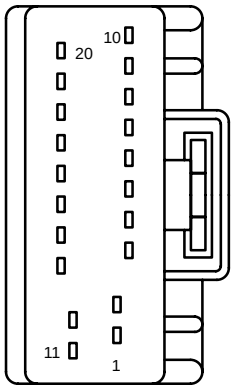


F20020

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 999 (LB/WH) | GEM/Central security module door ajar, signal |
| 2 | 671 (LB) | Wiper run/park relay, switched output |
| 3 | 627 (BK/OG) | Door ajar indicator, control |
| 4 | 646 (YE/WH) | Wiper run/park relay, control |
| 5 | 647 (GY/LB) | Wiper high/low relay, control |
| 6 | 871 (YE) | Safety belt indicator, control |
| 7 | 1008 (LG/OG) | Interior lamp relay, control |
| 8 | 1005 (VT/OG) | Generic Electronic Module (GEM), to, Battery saver relay – output |
| 9 | 1007 (YE/RD) | Generic Electronic Module (GEM), to, One–touch window relay – output |
| 10 | 686 (TN/RD) | Washer motor relay, control |
| 11 | 991 (TN/LB) | Master window adjust switch, feed, Down |
| 12 | 992 (WH/BK) | Master window adjust switch, feed, Up |
| 13 | 765 (YE/BK) | Door ajar switch, left front |
| 14 | 761 (GY/RD) | Door ajar switch, right front |
| 15 | – | not used |
| 16 | – | not used |
| 17 | 700 (WH/VT) | Liftgate ajar switch |
| 18 | 1032 (WH/BK) | Trailer tow relay, feed |
| | 14 (BN) | Power, Exterior lamps |
| 19 | 1083 (LB/BK) | Air bag, tone driver |
| 20 | 1013 (BN/LG) | GEM/Central security module door ajar, Exterior lamps |

## C3002 (GY)

**14B079**

M130
Rear blower motor




F02073

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 1132 (YE) | Blower motor, feed |
| 2 | 1133 (BN) | Blower motor, return |

## C3003

**14B079**

R78
Heater blower motor resistor, rear

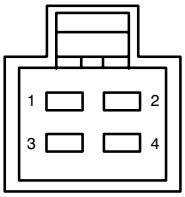


F04187

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 1135 (LB/OG) | Blower motor, to switch |
| 2 | 1133 (BN) | Blower motor, return |
| 3 | – | not used |
| 4 | 1134 (OG/BK) | Blower motor, to switch – High |