C802 (BK)

14A488

Speaker, right rear (18808)

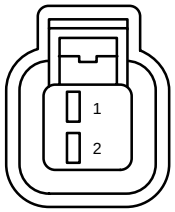

F02069

Pin	Circuit	Circuit function
1	802 (OG/RD)	Speaker, right rear (18808) +
2	803 (BN/PK)	Speaker, right rear (18808) –

C803 (BK)

14683

Power window motor, right rear (23394)

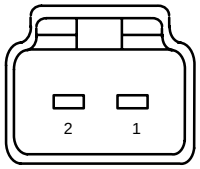

F02381

Pin	Circuit	Circuit function
1	881 (BN)	Window switch to Window motor, right rear
2	882 (BN/YE)	Window switch to Window motor, right rear

C804 (GY)

14A488

Door lock actuator, right rear (218A42)



F02383

Pin	Circuit	Circuit function
1	117 (PK/BK)	Door lock/unlock relay, switched output, Lock
2	118 (PK/OG)	Door lock/unlock relay, switched output, Unlock

C820 (BK)

14A488

Door ajar switch, passenger side rear (14018)



F02221

Pin	Circuit	Circuit function
1	1205 (BK)	Ground
2	760 (PK/LB)	Door ajar switch, right rear, signal

C906 (BK)

14334

Vanity mirror lamp, right (04100)

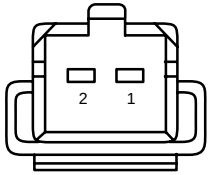

F02217

Pin	Circuit	Circuit function
1	705 (LG/OG)	Battery saver relay, switched power
2	1205 (BK)	Ground

C907 (BK)

14334

Vanity mirror lamp, left (04100)

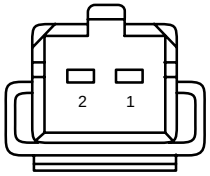

F02217

Pin	Circuit	Circuit function
1	705 (LG/OG)	Battery saver relay, switched power
2	1205 (BK)	Ground