C250

14401

N278
Ignition switch
(11572)

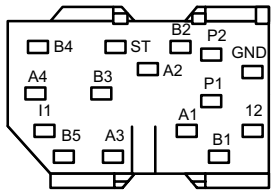

Pin	Circuit	Circuit function
A1	297 (BK/LG)	Voltage in Run or Accessory (overload protected)
A2	–	not used
A3	1040 (RD/BK)	Voltage in Run (overload protected)
A4	687 (GY/YE)	Voltage in Run (overload protected)
B1	37 (YE)	Voltage supplied at all times (overload protected)
B2	–	not used
B3	37 (YE)	Voltage supplied at all times (overload protected)
B4	1050 (LG/VT)	Voltage supplied at all times (overload protected)
B5	1050 (LG/VT)	Voltage supplied at all times (overload protected)
GND	57 (BK)	Ground
I1	964 (DB/LG)	Battery voltage, hot in Start and Run only
I2	–	not used
P1	512 (TN/LG)	Brake indicator, prove–out
P2	41 (BK/LB)	Battery voltage, hot in Start only
ST	32 (RD/LB)	Voltage supplied in Start (overload protected)

C251

14401

D20
Data Link Connector
(DLC) (14489)

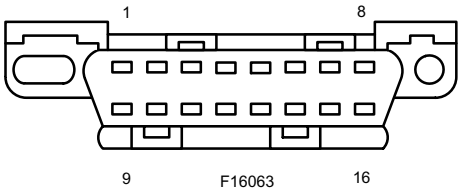

Pin	Circuit	Circuit function
1	–	not used
2	914 (TN/OG)	SCP Bus +
3	–	not used
4	57 (BK)	Ground
5	570 (BK/WH)	Ground
6	–	not used
7	70 (LB/WH)	ISO Bus
8	–	not used
9	–	not used
10	915 (PK/LB)	SCP Bus –
11	–	not used
12	–	not used
13	107 (VT)	Module programming signal
14	–	not used
15	–	not used
16	40 (LB/WH)	Voltage supplied at all times (overload protected)